MC28H5025**

Microwave Oven

Owner's instructions & Cooking guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

Planet First **100 % Recycled Paper**

This manual is made with 100 % recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 1 2015-01-12 3:47:15

contents

Safety information 2
Quick look-up guide 11
Oven features 12
Oven 12
Control panel 13
Accessories 13
Oven use 14
How a microwave oven works 14
Checking that your oven is operating correctly 14
Setting the time 15
Cooking/Reheating 15
Power levels and time variations 16
Adjusting the cooking time 16
Stopping the cooking 16
Setting the energy save mode 16
Using the slim fry cook features 17
Using the indian recipe features 22
Using the curd/dough proof features 42
Using the power defrost features 43
Using the roti/naan features 44
Convection 45
Grilling 45
Combining microwave and grill 46
Combining microwave and convection 46
Choosing the accessories 47
Using the child lock features 47
Using the manual crusty cook function 48
Spit-roasting 49
Using the vertical multi-spit 50
Using the deodorisation features 50
Switching the beeper off 50
Cookware guide 51
Cooking guide 52
Troubleshooting and information code 61
Checkpoints 61
Information codes 64
Technical specifications 64

safety information

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contains valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS

⚠ WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.

Warning; Fire hazard	Warning; Hot surface
Warning; Electricity	Warning; Explosive material
Do NOT attempt.	Do NOT touch.
Do NOT disassemble.	Follow directions explicitly.
Unplug the power plug from the wall socket.	Make sure the machine is grounded to prevent electric shock.
Call the service center for help.	Note
Important	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 2 2015-01-12 3:47:17

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

⚠ WARNING (Microwave function only)
WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
This appliance is intended to be used in household only.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
Only use utensils that are suitable for use in microwave ovens.
When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 3 2015-01-12 3:47:18

★	The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
⇄	If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
★	**WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
★	**WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
⊘	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
★	The oven should be cleaned regularly and any food deposits removed.

☛	Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
⊘	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
★	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
★	Children should be supervised to ensure that they do not play with the appliance.
✆	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
⊘	**WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 4 2015-01-12 3:47:18

	The appliance should not be cleaned with a water jet.
	This oven should be positioned proper direction and height permitting easy access to cavity and control area.
	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
	If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
	The microwave oven has to be positioned so that plug is accessible.
	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING
(Oven function only) - Optional

	WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
	WARNING: Accessible parts may become hot during use. Young children should be kept away.
	A steam cleaner is not to be used.
	WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
	The temperature of accessible surfaces may be high when the appliance is operating.
	The door or the outer surface may get hot when the appliance is operating.
	Keep the appliance and its cord out of reach of children less than 8 years.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 5 2015-01-12 3:47:18

★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
⦸	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
⦸	Appliances are not intended to be operated by means of an external timer or separate remote-control system.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safety bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

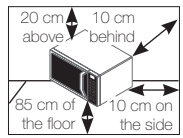

2. Remove all packing materials inside the oven.

3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)

4. This microwave oven has to be positioned so that plug is accessible.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  For your personal safety, plug the cable into a proper AC earthed socket.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 6 2015-01-12 3:47:18

- Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)

- **ALWAYS** ensure that the door seals are clean and the door closes properly.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

- **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:
  - Accumulate
  - Prevent the door from closing correctly
- **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 7 2015-01-12 3:47:18

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.
The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair.

- **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:
  - Unplug it from the wall socket
  - Contact the nearest after-sales service centre

- If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.
- This microwave oven is not intended for commercial use.
- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care centre to arrange for a qualified engineer to replace the bulb.

⚠ WARNING					
	Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
	Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
	This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 8 2015-01-12 3:47:20

	Do not pull or excessively bend or place heavy objecton the power cord.	✓	✓	✓	✓
	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
	Do not touch the power plug with wet hands.	✓	✓	✓	✓
	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓

	Do not pour or directly spray water onto the oven.	✓	✓		
	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: • Immerse the scalded area in cold water for at least 10 minutes. • Cover with a clean, dry dressing. • Do not apply any creams, oils or lotions.	✓	✓	✓	✓
	Do not put the tray or rack in water shortly after cooking because it may cause breakage or damage of the tray or rack.				✓
	Do not operate the microwave oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of the hot liquid.	✓			✓

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 9 2015-01-12 3:47:24

⚠ CAUTION					
	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.			✓	✓
	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.(MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) door (bent)

(2) door hinges (broken or loose)

(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 10 2015-01-12 3:47:26

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

(a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.

(b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

quick look-up guide

I want to cook some food.

	1. Place the food in the oven. Press the **START/+30s** button. **Result:** When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

I want to add an extra 30 seconds.

	Press the **START/+30s** button one or more times for each extra 30 seconds that you wish to add.
	By pressing the **Up** and **Down** Button, You can set the time as you want.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 11 2015-01-12 3:47:26

I want to Power Defrost some food.

Power Defrost	**1.** Press the **Power Defrost** button.
Select	**2.** Set the cooking category by pressing the **Up** or **Down** button. Press the **Select** button to set desired.
	3. Select the weight by pressing the **Up** or **Down** button as required.
/+30s START	**4.** Press the **START/+30s** button. **Result:** Defrosting starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

oven features

OVEN

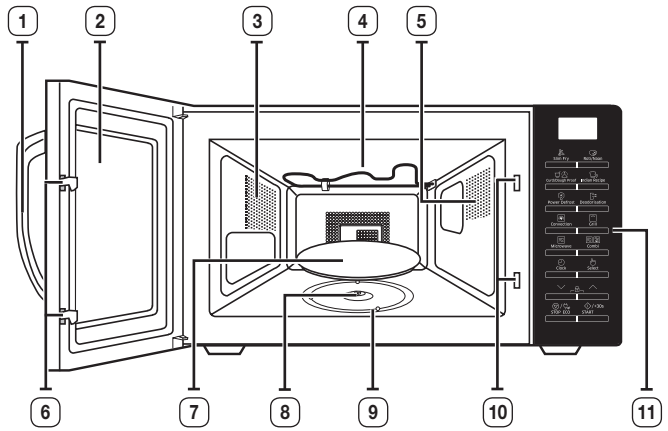

1. DOOR HANDLE
2. DOOR
3. VENTILATION HOLES
4. HEATING ELEMENT
5. LIGHT
6. DOOR LATCHES
7. TURNTABLE
8. COUPLER
9. ROLLER RING
10. SAFETY INTERLOCK HOLES
11. CONTROL PANEL

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 12 2015-01-12 3:47:27

CONTROL PANEL

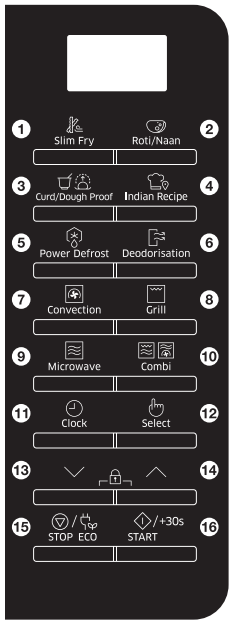

1. SLIM FRY BUTTON
2. ROTI/NAAN BUTTON
3. CURD/DOUGH PROOF BUTTON
4. INDIAN RECIPE BUTTON
5. POWER DEFROST BUTTON
6. DEODORISATION BUTTON
7. CONVECTION BUTTON
8. GRILL BUTTON
9. MICROWAVE BUTTON
10. COMBI BUTTON
11. CLOCK BUTTON
12. SELECT BUTTON
13. DOWN BUTTON
14. UP BUTTON
15. STOP/ECO BUTTON
16. START/+30s BUTTON

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	1. **Roller ring**, to be placed in the centre of the oven. **Purpose:** The roller ring supports the turntable.
	2. **Turntable**, to be placed on the roller ring with the centre fitting on to the coupler. **Purpose:** The turntable serves as the main cooking surface; it can be easily removed for cleaning.
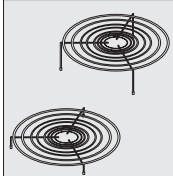	3. **High rack, Low rack,** to be placed on the turntable. **Purpose:** The metal racks can be used to cook two dishes at the same time. A small dish may be placed on the turntable and a second dish on the rack. **The metal racks can be used in grill, convection and combination cooking.**
	4. **Crust plate,** to be placed on the turntable. **Purpose:** The crust plate is used to brown botton of food by using the microwave or grill combination cooking modes and to keep pastry and pizza dough crispy.
	5. **Roasting spit, coupler barbecue and Skewer** to be placed in the glass bowl. **Purpose:** The roasting spit is a convenient of barbecuing a chicken, as the meat does not have to be turned over. It can be used for grill combination cooking.
	6. **Glass bowl,** to be placed on the turntable. **Purpose:** Roasting stand is placed on the glass bowl.

DO NOT operate the microwave oven without the roller ring and turntable.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 13 2015-01-12 3:47:28

HOW A MICROWAVE OVEN WORKS

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.
You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.



1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
   - Quantity and density
   - Water content
   - Initial temperature (refrigerated or not)

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre.
- The same temperature throughout the food.

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled “Troubleshooting” on the page 61-64.

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 900 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the right side of the door.
Place a glass of water on the turntable. Close the door.

Press the **START/+30s** button and set the time to 4 or 5 minutes, by pressing the **START/+30s** button the appropriate number of times.

Result: The oven heats the water for 4 or 5 minutes. The water should then be boiling.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 14 2015-01-12 3:47:29

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “88:88” and then “12:00” is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Do not forget to reset the clock when you switch to and from summer and winter time.

	1. Press the **Clock** button.
	**2.** Press the **Up** or **Down** button to set time display type (12H or 24H). At that time, press the **Select** button to set the display type.
	3. Press the **Up** or **Down** button to set the hour.
	4. Press the **Select** button.
	**5.** Press the **Up** or **Down** button to set the minute.
	6. When the right time is displayed, press the **Select** button to start the clock. **Result:** The time is displayed whenever you are not using the microwave oven.

COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended.

Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.

	1. Press the **Microwave** button. **Result:** The following indications are displayed: (microwave mode)
	**2.** Press the **Up** or **Down** button until the appropriate power level is displayed. At that time, press the **Select** button to set the power level. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.
	3. Set the Cooking time by pressing the **Up** or **Down** button. **Result:** The cooking time is displayed.
	4. Press the **START/+30s** button. **Result:** The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished: • The oven beep and flash “End” 4 times. The oven will then beep one time per minute.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 15 2015-01-12 3:47:29

POWER LEVELS AND TIME VARIATIONS

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity.
You can choose between six power levels.

Power level	Percentage	Output
HIGH	100 %	900 W
MEDIUM HIGH	67 %	600 W
MEDIUM	50 %	450 W
MEDIUM LOW	33 %	300 W
DEFROST	20 %	180 W
LOW	11 %	100 W

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased

ADJUSTING THE COOKING TIME

You can adjust the cooking time by pressing the **START/+30s**.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

	To adjust the cooking time of your food during cooking, press the **START/+30s** button once for each 30 seconds that you wish to add. • Example: To add three minutes, press the **START/+30s** button six times.
	To adjust the cooking time of press the **Up** and **Down** button that you wish to add.

STOPPING THE COOKING

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Open the door or Press the **STOP/ECO** button once. **Result:** Cooking stops. To resume cooking, close the door again and press the **START/+30s** button.
Completely	Press the **STOP/ECO** button once. **Result:** Cooking stops. If you wish to cancel the cooking settings, press the **STOP/ECO** button again.

SETTING THE ENERGY SAVE MODE

The oven has an energy save mode.

	• Press the **STOP/ECO** button. (During Standby mode.) **Result :** Display off. • To remove energy save mode, open the door or press the **STOP/ECO** button and then display shows current time. The oven is ready for use.

Auto energy saving function
If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 16 2015-01-12 3:47:30

USING THE SLIM FRY COOK FEATURES

The 22 **Slim Fry** cook features include/provide pre-programmed cooking times.
You do not need to set either the cooking times or the power level.
You can adjust the slim fry cook category by press the **Slim Fry** button.

First, place the food in the centre of the turntable and close the door.

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly. ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

	1. Press the **Slim Fry** button.
	**2.** Select the category of food by pressing the **Up** and **Down** button and press **Select** button. 1) Indian Slim Fry 2) Potatoes/Vegetables 3) Seafood 4) Chicken
	**3.** Select the type of food that you are cooking by pressing the **Up** and **Down** button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Select** button to select the type of food.
	4. Select the size of the serving by pressing the **Up** and **Down** button. • The serving size differs depending on the menu, and some menus do not provide a serving size. • You can skip this step for a menu that does not provide a serving size.
	5. Press the **START/+30s** button.

The following table presents the 22 **Slim Fry** auto programmes for frying. It contains its quantities and appropriate instructions.
You will use less oil compared to frying with oil fryer, while you will get tasty results.
Programmes are running with a combination of convection, top heater and microwave energy.

1. Indian Slim Fry

Code/Food	Serving Size	Ingredients
1-1 Samosa Pockets	4 pieces	Maida (all-purpose flour) - 1 cup, Oil - 2 tbsp., Ajwain (optional) - large pinch, Water - enough to knead the maida, Salt to taste, Oil for brushing **For the filling:** Boiled potatoes (crumbled) - 2, Boiled peas - ¼ cup, Grated ginger - ¼ tsp., Red chilli powder - 1 tsp., Coriander powder - ½ tsp., Cumin powder - a pinch, Kasuri methi - a pinch, Lemon juice - dash, Garam masala - a pinch, Chopped coriander leaves, Salt to taste
		Instructions Mix the maida with salt, oil, ghee and ajwain, combine to form a crumbly mixture. Now slowly add enough water to make pliable dough, not too soft. Divide the dough and shape into balls. Keep aside covered with moist cloth for 15-20 minutes. Now prepare the filing for the samosa by mixing all the ingredients for filling. Divide the dough into 4 equal parts and make into balls. Roll each ball into 6-inch diameter circles and cut each circle in half. Spread the paste lightly all along the edge of one semicircle. Spread potato filling in centre leaving the edges fold it into triangle shape pockets or desired shape seal the edges with a little water. Continue filling the rest of the Samosa Pockets. Now Keep the 4 Samosa Pockets on the crusty plate and brush all sides with vegetable oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button.

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 17 2015-01-12 3:47:30

Code/Food	Serving Size	Ingredients
1-2 Veg. Cutlets	6 pieces	Potatoes - 2 medium (300 g), Boiled and shredded, Mixed vegetables - 2 cups (250 g) : peas, carrots, green beans, corn, Paneer - 3~4 oz (100 g), Onions - ¼ medium (75 g), Green chillies (chopped) - to taste, Cilantro (Coriander leaves), chopped - 10 sprigs, Assorted nuts(chopped) - 1 Tbsp. (example: walnuts, peanuts, etc), Salt to taste, Chaat masala - 1 tsp., Dried mango powder (Amchur) - 1 tsp., Red chilli powder - ½ tsp. or to taste, Roasted cumin powder - ½ tsp., Bread crumbs for coating, Oil for brushing
	Instructions Finely chop all the Mixed Vegetables and put them in a bowl. Do the same with the Paneer and pour into a bowl. Into the bowl, add in Potatoes, Onions, Green Chillies, Cilantro, and Mixed Nuts. Mix gently but well. Add in the dry spices: Salt, Chaat Masala, Dry Mango Powder, Roasted Cumin Powder and Red Chilli Powder. Again mix well but gently. Put the bread crumbs in a plate. Make cutlets to the size desired, roll in the crumbs and coat well with the bread crumbs. Brush a little Oil on the crusty plate. Now Keep the 4 Veg Cutlets on the crusty plate and brush all sides with vegetable oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button.	

Code/Food	Serving Size	Ingredients
1-3 Bread Pakora	4 pieces	Bread slices - 4, Salt to taste, Green chilli (chopped) - 1, Coriander powder - ¼ tsp., Red chilli powder - ¼ tsp., Roasted cumin powder - ½ tsp. **For the batter:** Gram flour (besan) - 1 cups, Salt to taste, Red chilli powder ¼ teaspoon, Dry mango powder (amchur) - ¼ tsp., Garam masala powder - ⅛ tsp., Oil for brushing
	Instructions Mix gram flour, salt, soda bicarbonate, red chilli powder, amchur, garam masala powder in a bowl. Add sufficient water to make thick and smooth batter. Cut the slices into desired shape. Brush little Oil on the crusty plate. Dip the bread slices in the batter. Keep the 4 pieces on the crusty plate and brush all sides with vegetables oil. Put the crusty plate on high rack and press start button. When beep, turn the side over and press start button.	
1-4 Masala French Fries	30 to 35 pieces	Potatoes - 2, Chaat masala powder - ¾ tsp., Red chilli flakes - ½ tsp., Black pepper powder - ½ tsp., Oil to brush. Salt to taste
	Instructions Wash and peel the potatoes. Slice the potato into thin, long pieces put them in salt water. In a small bowl, prepare the masala spice mix salt, chaat masala powder, red chilli flakes & black pepper powder. Now drain the salt water and dry the potatoes using a paper towel. Grease the crusty plate with a little vegetable oil, Place fries on crusty plate and spread evenly, brush them up with oil. Put the crusty plate on high rack and press start. When beep, transfer the fries to a bowl and sprinkle spice mix evenly and serve.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 18 2015-01-12 3:47:30

Code/Food	Serving Size	Ingredients
1-5 Mix Veg. Pakora	12 pieces	Chickpea flour - 1 cup, Salt - 1 tsp., Turmeric - ¼ tsp., Ground cumin - ½ tsp., Green chilli - ¼ tsp., Potato - 1, Onion - 1, Olive oil
	Instructions Mix the chickpea flour with the salt, green chillies and the spices. Stirring with a whisk, add 200 ml (1 cup) of water. Finely chop the Potatoes and onions. Add them to the water-chickpea batter. Brush a little oil on the crusty plate. Put one-one tbsp of batter on the crusty plate and brush them with cooking oil. Put the crusty plate on high rack and press the start button. When beep, turn the side over and press start button.	
1-6 Aloo Bonda Flip Overs	6 pieces	Mashed aloo (potatoes) - 2 (large boiled), Green chilies (chopped) - 1~2, Coriander leaves (finely chopped) - 1 tbsp., Gram flour - 1cup, Salt to taste, Red chilli powder to taste, Garam masala powder - ¼ tsp., Turmeric powder - ¼ tsp., Oil for brushing
	Instructions Add salt, chili powder, garam masala, coriander, and green chilies to the mashed aloo (potatoes) and mix well. In a bowl take a cup of gram flour; add turmeric powder, little salt and chili powder to it. Add little water bit by bit and mixing with hand make a batter (neither too thick nor too loses). Make small balls of aloo (potato) mixture and flatten them to make turnovers. Brush little oil on the crusty plate. Dip each ball in the batter and keep it on the crusty plate and brush it with oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve aloo bonda hot with chutney.	

Code/Food	Serving Size	Ingredients
1-7 Flat Bread Roll	4 pieces	White bread or brown bread - 5~6 slices, Potatoes - 2 (medium size), Dry pomegranate seeds - ½ tsp. or dry mango powder - ½ tsp,, Crushed black pepper - ½ tsp. or black pepper powder ¼ tsp., Red chilli powder - ¼ tsp., Green chilli - 1 (chopped), Garam masala powder - ¼ tsp., Cumin powder - ¼ tsp., Chaat masala - ½ tsp., Coriander leaves - 2 to 3 tsp. (chopped), Salt as required, Oil for brushing
	Instructions Boil the potatoes. When they are still warm, peel and mash them and keep aside. Add the pomegranate powder, crushed black pepper, red chili powder, chopped green chilies, coriander leaves, garam masala powder, cumin powder and chaat masala powder and salt. Mix the whole filling well. Make small to medium rolls of the filling depending on the size of the bread and how many you are going to use. Take a slice of bread and dampen it with water, squeeze the water from the bread. Place the filling in the center of the bread. Roll the bread and close the edges so as to get an even outer cover and to cook them evenly gently press them to make them flat. Make all bread rolls this way and keep aside. Brush little oil on the crusty plate. Now Keep the 4 bread rolls on the crusty plate and brush all sides with olive oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve the bread rolls with tomato sauce or green chutney.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 19 2015-01-12 3:47:30

Code/Food	Serving Size	Ingredients
1-8 Paneer Pakora	10 pieces	Paneer - 150 g (10 square pieces), Gram/ besan flour - 1 cup, Red chilly powder - 1 tsp., Mango powder - ½ tsp., Roasted cumin powder - ½ tsp., Garam masala powder - ½ tsp., Oil to brush, Salt to taste
	Instructions Cut paneer into thick medium sized square shaped pieces. Sprinkle salt , red chilli and cumin powder over the paneer pieces and mix well. In a bowl, mix, gram flour, red chilli powder, mango powder, roasted cumin powder, garam masala powder and salt. Add little water and beat the mixture to form a thick & smooth batter. Brush little oil on the crusty plate. Dip the paneer pieces, into the batter and keep on the crusty plate. Brush all sides of paneer pieces with olive oil. Put the crusty plate on high rack and press start. When beep, turn the side over and press start button. Serve the paneer pakora with tomato sauce or green chutney.	
1-9 Mirchi Pakora	6 pieces	Besan/chickpea flour - 1 ½ cup, Chilli powder - ½ tsp., Turmeric powder - ½ tsp., Garam masala powder - ¼ tsp., a pinch of asafoetida mango (Amchoor) powder, Salt as required, Water, Green chilies - 6, oil, Rice flour - 1 tbsp. **For the filling:** Boiled potato - 1 (medium), Salt, Red chilli powder, Chaat masala
	Instructions Add all the dry ingredients to the batter. Add little water so as to form a thick batter. Give 1 vertical slits on the green chillies and deseed them. in a small bowl mash boiled potato and add dry spices. Fill the chillies with potato filling. Brush, little oil on the crusty plate .Dip them in the batter. Evenly coat the mirch (chillies) with batter. Put the mirchi pakora on the crusty plate and brush them with oil. Put the crusty plate on high rack and press the start button. When beep, turn the side over and press start button.	

Code/Food	Serving Size	Ingredients
1-10 Aloo Tikki	6 pieces	Boiled, peeled and mashed potatoes - 2, Boiled and coarsely crushed green peas - ¼ cup, Finely, chopped coriander (dhania) - ⅓ tbsp., Chaat masala - ⅓ tsp., Chilli powder - ⅛ tsp., Lemon juice - ½ tsp., Salt to taste, Olive oil
	Combine all the ingredients in a bowl (except green peas) and mix well. Divide the mixture into 6 equal portions and shape each portion into a round. Fill the crushed green peas in the potato ball and make it flat. Brush little oil on the crusty plate. Keep the tikki on the crusty plate and brush both sides with olive oil. Put crusty plate on high rack and press start button. When beep, turn the side over and press start button.	

2. Potatoes/Vegetables

Code/Food	Serving Size	Instructions
2-1 Frozen Oven Chips	300-350 g 450-500 g	Distribute frozen oven chips evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.
2-2 Frozen Potato Croquettes	200-250 g 300-350 g	Distribute frozen potato croquettes evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
2-3 Homemade French Fries	300-350 g 450-500 g	Use hard to medium type of potatoes and wash them. Peel potatoes and cut into sticks with a thickness of 10 x 10 mm. Soak in cold water (for 30 min.). Dry them with a towel, weigh them and brush with 5 g olive oil. Distribute homemade fries evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 20 2015-01-12 3:47:30

Code/Food	Serving Size	Instructions
2-4 Potato Wedges	200-250 g 300-350 g 400-450 g	Wash normal sized potatoes and cut them into wedges. Brush with olive oil and spices. Put them with the cut side on the crusty plate. Set plate on high rack. Stand for 1-3 minutes.
2-5 Frozen Onion Ring	100-150 g 200-250 g	Put frozen breaded onion rings or frozen breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
2-6 Sliced Courgettes	100-150 g 200-250 g	Rinse and slice courgettes. Brush with 5 g olive oil and add spices. Put slices evenly on the crusty plate and set plate on high rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.

3. Seafood

Code/Food	Serving Size	Instructions
3-1 Frozen Prawns	200-250 g 300-350 g	Distribute frozen breaded prawns evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
3-2 Fish Cutlets	200-250 g 300-350 g	Distribute breaded fish cutlets evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.
3-3 Fried Squid	100-150 g 200-250 g	Distribute breaded squid rings evenly on the crusty plate. Set plate on low rack. Stand for 1-2 minutes.

4. Chicken

Code/Food	Serving Size	Instructions
4-1 Frozen Chicken Nuggets	200-250 g 300-350 g	Distribute frozen chicken nuggets evenly on the crusty plate. Set plate on low rack. Turnover after beep sounds. Press start to continue. (The oven keeps operating if you do not turn over). Stand for 1-2 minutes.
4-2 Chicken Drumsticks	200-250 g 300-350 g 400-450 g	Weigh drumsticks and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-3 minutes.
4-3 Chicken Wings	200-250 g 300-350 g	Weigh chicken wings and brush with oil and spices. Place them evenly on high rack. Turnover after beep sounds, oven will stop process. Press start to continue. Stand for 1-2 minutes.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 21 2015-01-12 3:47:31

USING THE INDIAN RECIPE FEATURES

The 100 **Indian Recipe** features provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.

	1. Press the **Indian Recipe** button.
	2. Press the **Up** or **Down** button to select cook category.
	**3.** Select the cook category by pressing the **Select** button.
	4. Press the **Up** or **Down** button to select cook type.
	5. Press the **START/+30s** button. **Result:** The food is cooked according to the pre-programmed setting selected. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

The following table presents the various **Indian Recipe** (Veggie) programmes and appropriate Instructions.

Use oven gloves when taking out food.

1. Soups & Snacks

Code/Food	Serving Size	Ingredients
1-1 Tomato Soup	400-500 g	Tomato - 6 ea (medium size), Garlic - 7~8 Cloves, Carrot - 1 ea (small size), Celery - 1 stalk, Onion - 1 ea (medium size), Pepper corns - 5~6 , Oil - 1 tbsp., Butter - 1 tbsp., Salt & sugar as per your taste, Cream - 2 tbsp., Water - 2 cups
	Instructions Wash all vegetables. Cut tomatoes into quarters. Peel & chop garlic. Peel & cut carrots in rounds. Chop celery, slice onion & crush pepper corns. In microwave safe glass bowl put oil onion, carrot, celery and garlic. Add 2 cups of water & cook. When beep, let it be cool and then blend in blender. Pour them in microwave safe glass bowl and add butter, tomato puree, salt and sugar. Stir well and cook. After cook strain and add cream and serve it hot.	
1-2 Mushroom Soup	400-450 g	Potato - 1 ea, Cabbage - 50 g, Onion - 1 ea (small size), Mushroom - 100 g, Tomato sauce - 2 tbsp., Oil - 2 tbsp., Water - 2 cups, Salt, Sugar, Pepper as per taste
	Instructions Chop all vegetables. In microwave safe glass bowl put potato, cabbage, onion, 2 cups of water and cook. When beep, grind the stalk with some water and then add oil, chopped mushroom, salt, black pepper, sugar and tomato sauce. Mix well and press start. Serve hot and garnish with grated cheese.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 22 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
1-3 Tom Yum Soup	300-350 g	Mushroom - 6~7 (chopped), Fresh coriander leaves a few spring, Green or fresh red chili - 3~4, Lemon grass - 4 inches stalk, Lime leaves - 4~5, Salt as per your taste, Thai red curry paste - 2 tbsp., Lemon juice - 2 tbsp., Water - 4 cups
	Instructions In microwave safe glass bowl add 4 cups of water, lemon grass, lime leaves, 2 red or green chilies and salt. Mix well and cook. When beep, grind the stalk with some water and then add oil, chopped mushroom and Thai red curry paste. Serve hot with Lemon juice & red or green chili.	
1-4 Garlic Bread	300-400 g	Bread (French) - 3 slices, Butter - 3 tbsp., Garlic - 2 tbsp., Grated cheese - 3 tbsp., Salt, Pepper, Oregano, Chili flakes as per taste.
	Instructions Pre-heat the oven 200 °C with the convection function. Mix butter, garlic, salt, pepper, oregano and make a paste. Apply this paste on both sides of the bread and sprinkle grated cheese and chili flakes. Put these breads on crusty plate and put in on low rack. When beep, select menu and cook.	
1-5 Dhokla	200 g	Gram flour - 200 g, Warm water - 75 ml, Curd - 3 tbsp., Green chili-ginger paste - 1½ tsp., Fruit salt - 1½ tsp., Salt, Sugar as per your taste
	Instructions Grease the microwave safe flat dish, with little oil. Mix gram flour, curd, sugar, salt, water, ginger-green chili paste, yellow color, fruit salt together. Pour the mixture in greased dish and cook. Cut it into pieces, garnish with grated coconut and coriander and serve with sauce or chutney.	

Code/Food	Serving Size	Ingredients
1-6 Poha	300-400 g	Poha - 0.3 kg, Oil - 3 tbsp., Onion - 1 cup (chopped), Green chili - 4 ea, Mustered, Cumin, Asafetida, Turmeric, Curry leaves for tempering, Grated Coconut & Coriander for garnishing
	Instructions In microwave safe bowl put oil mustered, cumin, green chili, onions, turmeric powder curry leaves. Mix well and cook. When beep add washed poha, salt and sugar to taste. Mix well and press start. Garnish coconut and coriander. Serve hot.	
1-7 Upama	300-400 g	Rava/ Suji (Semolina) - 1 cup or 100 g, Oil - 2 tbsp., Mustard seeds - 2 tsp., Cumin - 2 tsp., Urad Dal (Black Gram) - ½ tsp., Green Chilies - 2 ea, Curry Leaves - 7~8, Water - 200 ml, Sugar & Salt as per your taste, Lemon Juice - 1 tsp.
	Instructions In microwave safe bowl put oil, mustard seeds, cumin, black gram, green chilies, curry leaves, and rava suji/semolina. Mix well and cook. When beeps add water, sugar and salt to taste, lemon juice, mix well and then press start. Garnish with coriander and bhujiya.	
1-8 Chili Honey Vegetables	200 g	Mix Vegetable (Carrot, Muter, Corn, Cauliflower, French Beans etc : cut small pieces) - 200 g, Honey - 2 tbsp., Salt, Lemon juice, Pepper powder as per your test, Water as required
	Instructions In microwave safe bowl take vegetables and some water. When beeps drain water and add honey, salt, lemon juice, pepper powder mix well and then press start.	
1-9 Vegetable Pasta	200-250 g	Pasta - 200 g, Oil - 1 tbsp., Grated Cheese - 3 tbsp., Pasta Sauce, Spring Onion, Water as per your taste, Salt as required
	Instructions In microwave safe bowl add pasta and water and cook. When beep strain Pasta and mix with all the ingredients and then press start. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 23 2015-01-12 3:47:31

2. Vegetables & Rice

Code/Food	Serving Size	Ingredients
2-1 Mutter Paneer	400-500 g	Boiled Mutter - 100 g, Paneer - 200 g, Onions - 2 (paste), Tomato - 2 (puree), Garlic-ginger paste - 1 tsp., Oil - 2 tbsp., Red chili powder, Garam masala, Fresh Cream, Salt, Turmeric, Sugar, Kasoori methi, Coriander as per your taste, Cream - 2 tbsp.
	Instructions In microwave safe bowl add oil, onions and ginger-garlic paste and cook. When beep add tomato puree, cream, salt, turmeric, sugar, boiled mutter, paneer, kasoori methi (except masala) and then press start.	
2-2 Aloo Ghobi	300-400 g	Cut Potatoes - 200 g, Cut Cauliflower - 200 g, Cut Tomatoes - 100 g, Oil - 2 tbsp., Turmeric powder, Coriander powder, Red chili powder, Cumin seeds, Salt, Garam masala, Water as per your taste
	Instructions In microwave safe glass bowl take oil, potatoes, cauliflower. Mix well and cook. When beep, add tomatoes, other ingredients, water and then press start.	
2-3 Kadhi Pakoda	400-500 g	Ghee - 2 tbsp., Gram Flour - 3 tbsp., Curd - 200 g, Water - 300 ml, Salt, Sugar, Cumin, Green Chili, Ginger, Curry Leaves as per your taste, Gram flour for Pakoda - 100 g, Red Chili powder, Turmeric, Ajwain, Salt as per your taste
	Instructions In bowl take gram flour and add salt, ajwain, red chili powder, little oil to it and make soft dough and make small ball form it. In microwave safe glass bowl add ghee, cumin, curry leave, curd, water, gram flour, sugar, salt, green chili, ginger. Mix well and cook. When beep, add kadhi mixture to prepared ball dough and then press start. Serve hot with rice.	

Code/Food	Serving Size	Ingredients
2-4 Dal Tadaka	400-500 g	Soaked Arhar Dal (Soaked for 1 hr) - 200 g, Water - 300 g, Oil - 2 tbsp., Cumin - 1 tbsp., Green Chilies - 2~3 ea, Curry Leaves - 5~6 ea, Salt, Coriander, Cumin Powder, Turmeric, Asafetida, Kasoori methi, Lemon juice as per your taste
	Instructions In microwave safe bowl take dal, water, turmeric, asafetida. Cover and cook. When beep take oil, cumin, chopped green chilies, curry leaves, salt, coriander, cumin powder, kasurimethi, lemon juice, water and then press start. Garnish with tomato.	
2-5 Palak Paneer	400-500 g	Palak Leaves (Spinach) (Boiled & Grinded) - 300 g, Onion (Chopped) - 2 ea, Tomato (Chopped) - 2 ea, Ginger Garlic Paste - 2 tbsp., Paneer - 150 g, Oil - 3 tbsp., Garam Masala, Coriander, Cumin Powder, Salt, Fresh Cream as per your taste
	Instructions In microwave safe glass bowl take oil, chopped onion, ginger garlic paste and cook. When beep add tomato and all the masala, palak paste, paneer and cream. Mix it well and then press start.	
2-6 Sambhar	400-500 g	Arhar Dal/ Red Gram - 100 g, Oil - 2 tbsp., Onion - 1 ea (Chopped), Tomato - 1 ea (Chopped), Mix vegetables (drumsticks, ghia/bottle gourd, red pumpkin, brinjal, ladies finger) - 1 cup, Mustard Seeds - 1 tsp., Asafetida - ¼ tsp., Tamarind pulp, Cumin seeds, Green chili, Sambhar masala, Salt as required
	Instructions In microwave safe glass bowl put dal, turmeric powder, onions, green chilies, tomatoes, mixed vegetables and add some water. Cover and cook. When beep, add oil, asafetida, cumin, curry leaves, red chilies, sambhar masala, tamarind pulp, salt, water and then press start.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 24 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
2-7 Corn & Shimla Mirch Rice	400-500 g	Soaked Rice 200 g, Corn 50 g, Chopped Simla Mirch - 1 ea, Oil - 2 tbsp., Black cardamom - 2 or 3, Cumin seeds - ½ tsp., Onions - 2 ea (Chopped), Green chili & salt as per your taste
	Instructions In microwave safe glass bowl take oil, black cardamom, cumin seeds, chopped onions, green chili & salt, soaked rice and cook. When beep add water and salt. Mix well and cover and then press start.	
2-8 Dosa Sabji	400-500 g	Boiled potato peeled & chop 300 g., Chopped Onion 2 Nos., Green chili salt, turmeric powder as per your taste, Oil 2 tbsp., Mustard Seeds, Cumin seeds, Curry leaves for tempering
	Instructions In micro wave safe glass bowl take oil, mustard seeds, cumin seeds, curry leaves, green chili, turmeric powder, onion and cook. When beep mix it well and add chopped potato. Mix it well and press start. Garnish with coriander leaves.	
2-9 Vegetable Biryani	400-500 g	Soaked Basamati Rice 200 g, Water - 400 ml, Ghee - 2 tbsp., Cloves, Cinnamon, Black pepper, Cardamom - 2 pieces, Salt & Sugar as per your taste, Mixed vegetables (cauliflower, peas, french beans & carrot : chopped) - 1 cup
	Instructions In microwave safe glass bowl add ghee, vegetables, all masalas and soaked basamati rice, mix it well and cook. When beep, add water, salt & sugar. Cover it and press start. Serve hot.	

Code/Food	Serving Size	Ingredients
2-10 Lemon Rice	400-500 g	Soaked Rice - 150 g., Mustard seeds - ½ tsp., Urad dal - ½ tsp., Grated ginger - 1 tsp., Roasted Daria - 1 tsp., Dry red chili – 2, Curry leaves – 7~8., Turmeric powder - ½ tsp., Lemon juice - 1 tsp., Oil - 2 tbsp., Salt as per your taste, Chopped coriander - 1 tbsp., Water - 350 ml
	Instructions In microwave safe glass bowl take oil, mustard seeds, urad dal, grated ginger, roasted daria, dry red chili, curry leaves, turmeric powder, lemon juice, salt, soaked rice and cook. When beep add water and salt, mix it well, cover it and press start. Garnish with chopped coriander & serve hot.	

3. Sweets & Tandoori

Code/Food	Serving Size	Ingredients
3-1 Suji Halwa	200-250 g	Suji - 150 g, Ghee - 4 tbsp., Sugar - ¾ cup., Water - 3 cup, Dry Fruit, Cardamom Powder as per your test
	Instructions In microwave safe glass bowl take suji, ghee and cook. When beep, add water, sugar, dry fruit & cardamom powder, mix well and press start.	
3-2 Besan (Bengal Gram Flour) Laddoo	300-350 g	Besan (Bengal Gram flour) - 2 cups , Ghee - 100 g, Powder Sugar - 75 g, Cardamom powder - 1 tbsp., Almonds (Chopped) - ¼ cup
	Instructions In microwave safe glass bowl add besan and ghee, mix well and cook. When beep stir well and press start. When cool and cardamom powder, sugar powder, mix well and make ladoo.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 25 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
3-3 Gajar (Carrot) ka Halwa	450-500 g	Grated carrot - 400 g, Milk - 100 g, Khoya - 50 g, Sugar - 100 g, Milk Powder - 50 g, Cardamom powder - 1 tsp., Almonds & resins - 2 tbsp.
	Instructions In microwave safe glass bowl add grated carrot, milk, khoya, milk powder, mix it well and cook. When beep stir well and add sugar, cardamom powder, mix it well and press start. Decorate it with almonds & resins. Serve hot or cold.	
3-4 Phirani	450-500 g	Rice (soaked in 200 ml. milk for 1 hr.) - 0.3 kg, Milk - 300 ml, Sugar - 200 g, Saffron - 1 tsp., Cardamom powder - 1 tsp., Pista pieces - 1 tbsp.
	Instructions Blend soaked rice with milk. Pour this microwave safe bowl and cook. When beep adds sugar, saffron, cardamom powder, mix it well & press start. Take it out, stir it. When cool, decorate with pista pieces and serve cool.	
3-5 Paneer Tikka	250-300 g	Paneer - 200 g, Marinate : Hung Curd - 4 tbsp., Ginger Garlic Paste - 1½ tbsp., Red Chili Powder, Garam Masala as per your taste, Lemon Juice - 1 tbsp., Edible Red Color - 1 pinch, Oil - 1 tbsp.
	Instructions Mix all the ingredients of marinate thoroughly. Add paneer pieces and keep it for 2 hrs in a refrigerator. Keep the pieces on crusty plate at high rack. Apply little oil on it and cook. When beep, turn the pieces and then press start. Serve hot with chutney.	
3-6 Aloo Tikka	400-500 g	Baby Potato (peeled) - 400 g Curd - ½ cup Ginger garlic paste - ½ tbsp., Coriander powder, cumin powder, red chili powder, kasoori methi, salt & oil as per your test
	Instructions Take peeled aloo, add curd, ginger garlic paste, other spices and salt. Mix them well and put them on crusty plate at high rack, Sprinkle oil and cook. When beep turn potato and press start. Serve hot.	

Code/Food	Serving Size	Ingredients
3-7 Tandoori Gobhi	250-300 g	Gobhi (Cut big flowers) - 200 g, Marinate : Hung Curd - 4 tbsp., Ginger Garlic Paste - 1½ tbsp., Red Chili Powder, Garam Masala as per your taste, Lemon Juice - 1 tbsp., Edible Red Color - 1 pinch, Oil - 1 tbsp.
	Instructions Mix all the ingredients of marinate thoroughly. Add gobhi pieces and keep it for 2 hrs in a refrigerator. Keep the pieces on crusty plate at high rack. Apply little oil on it and cook. When beep, turn the pieces and press start. Serve hot with chutney.	
3-8 Vegetable Kabab	8 Kababs	Boiled vegetables - Potato, Cauliflower, Carrot, Green peas - 0.1 kg, Water - 3 tbsp., Cornflour – 1~2 tbsp., Bread crumbs - 1 tbsp., Ginger-Garlic paste - ½ tsp., Chili paste - ½ tsp., Garam Masala - ¼ tsp., Lemon juice, salt, sugar as per your taste
	Instructions Mix boiled vegetables and strained bengal gram, ginger-garlic paste, red chili powder, garam masala, coriander-cumin powder, salt, bread crumbs, coriander leaves together. Apply little oil to your palms and shape as desired like tikki balls and roll over with corn flour. Cutlet rolls, brush with little oil. Place kebabs on crusty plate at high rack and cook. When beep, turn kababs and press start. Serve it with chutney and salads.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 26 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
3-9 Stuffed Mushroom	200-250 g	Mushroom - 150 g, cottage cheese- 3 tbsp., Grated cheese - 2 tbsp., corns – 1 tbsp., corn flour- 2 tbsp., lemon juice- 1 tbsp., red chilli powder- ¼ tsp, garam masala- ¼ tsp, Salt as per your taste, Butter - 2 tbsp.
	Instructions Hollow the mushrooms and marinate with lemon juice, salt, red chilli powder, butter and garam masala, keep aside for 15 minutes. In another bowl mix cottage cheese, grated cheese and corn and season as per tatse. Stuffed the mushrooms with cottage cheese mixture and coat with corn. (flour mixed in very less water.) Grease the crusty plate with some butter and place the mushrooms on it, brush up a little butter on mushrooms and put the crusty plate on high rack and cook. When beep brush up a little more butter and cook.	

4. Continental

Code/Food	Serving Size	Ingredients
4-1 Cheese Cutlet	8 ea	Potatoes - 4 ea (boiled), Cottage cheese - 200 g, Chopped coriander - 2 tbsp., Chopped green chili - 1 tsp., Chopped onion - 1 ea, Chopped cabbage - 2 tbsp., Bread crumbs - 4 tbsp., Oil for applying, Salt as per your taste
	Instructions Mash the potatoes very well, add all ingredients, mix it well and shape the cutlet as you wish. Take it on crusty plate at high rack, applying oil and cook. When beep, turn the pieces and press start.	

Code/Food	Serving Size	Ingredients
4-2 Tomato Basil Soup	300-400 g	Chopped tomato - 4 ea, Fresh basil leaves -20~25, Crushed peppercorns - 10~15, Chopped onion - 1 ea, Chopped garlic - 7~8, Celery sticks finely chopped - 2 tbsp., Corn flour - 2 tbsp. (dissolve in 1 cup of water), Salt and Sugar as per your taste, Water - 3 cups, Olive oil - 2 tbsp.
	Instructions In microwave safe glass bowl add tomato, basil leaves, onion, garlic, celery sticks and water, mix well and cook. When beep add all other ingredients, mix well and press start. Serve hot.	
4-3 Vegetable Chowmein	400-450 g	Noodles - 200 g, Water - 2 cups, Mix Vegetables - 100 g, Soya Sauce, Chili Sauce, Viengar, Salt & Pepper as per your taste, Oil as required
	Instructions In microwave safe glass bowl take noodles and 2 cups water and cook. When beep, drain all the water from it & keep noodles a side. In other microwave safe glass bowl take oil & vegetables and press start. After done add all ingredients with noodles mix well & serve hot.	
4-4 Risotto Rice	450-500 g	Basmati Rice (soaked) - 150 g, Spinach (chopped) - 100 g, Butter - 3 tbsp., Chopped onion - 2 ea, Chopped Garlic - 2 tsp., Grated cheese - 3 tbsp., Salt & Pepper as per your taste, Water - 300 ml
	Instructions In microwave safe glass bowl take butter, onion, garlic and cook. When beep add spinach (chopped) soaked rice, water, salt & pepper and mix well. Cover and press start. Garnish with grated cheese and serve hot.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 27 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
4-5 Baked Vegetables	350-400 g	Half boiled vegetables (carrot, cauliflower, french beans - cut into small pieces, sweet corn & green peas etc.) - 300 g, Plain flour - 2 tbsp., Butter - 2 tbsp., Milk - 2 cups, Water - ½ cup, Grated cheese - 5 tbsp., Salt, sugar, pepper as per your taste
	Instructions In microwave safe glass dish take butter, vegetables, plain flour, milk, water, salt, sugar and pepper, mix well and cook. When beep mix it well & spread grated cheese on it. Keep the dish on high rack and press start. Serve hot.	
4-6 Noodles with Tomato and Cheese Sauce	400-450 g	Ribbon noodles - 250 g, Tomato sauce - ½ cup, Pizza sauce - ½ cup, Cheese sauce - 1 cup, Oil - 2 tbsp., Grated cheese - 2 tbsp., Salt, sugar & pepper as per your taste, Fresh Cream - 2 tbsp., Oregano - ½ tsp., Water - 4 cups
	Instructions In microwave safe glass bowl add noodles, oil and cook. When beep drain & keep a side. In another bowl add tomato sauce, pizza sauce, cheese sauce, fresh cream, salt, sugar & pepper, mix it well and add boiled noodles, sprinkle cheese and press start. Serve hot.	
4-7 Macaroni Hot Pot	250-300 g	Shell Macaroni - 200 g, Chopped Onion - 2 ea, Chopped capsicum - 1 ea, Chopped Tomato - 2 ea, Chopped Garlic - 1 tsp., Red chili powder - ½ tsp., One small can baked beans - 200 g, Tomato ketchup - 6 tbsp., Grated cheese - 4 tbsp., Butter - 1 tbsp., Salt as per your taste, Oil - 1 tbsp., Water - 4 cups
	Instructions In microwave safe glass bowl add shell macaroni, oil, water and cook. When beep drain & keep a side. In another bowl add butter, salt, onion, capsicum, tomato, garlic cloves, chili powder, cheese, baked beans and press start. When beep add macaroni, mix it well and serve hot.	

Code/Food	Serving Size	Ingredients
4-8 Pasta	400-450 g	Penne Pasta - 200 g, Chopped onion - 2 tbsp., Chopped garlic - 2 tsp., Chopped spinach - 75 g, Cream - 1 cup, Grated cheese - 3 tbsp., Butter - 2 tbsp., Nutmeg Powder - 1 pinch, Oregano - ½ tsp., Salt & pepper as per your taste, Oil - 1 tbsp., Water - 3 cups
	Instructions In microwave safe glass bowl take pasta, water, oil and When beep drain the water & keep a side. In another bowl add butter, chopped onion, chopped garlic, spinach, cream, nutmeg powder, salt, pepper powder, oregano, mix it well and press start. After done pasta & cheese, mix it well & serve hot.	
4-9 Corn & Potato Baked	300-350 g	Boiled sweet corn - 100 g, Boiled Potatoes - 2 ea, Finely chopped onion - 1 ea, Finely chopped green chili - 2 ea, Grated cheese - 4 tbsp., White sauce - 1 cup, Fresh cream - 2 tbsp., Butter - 2 tbsp., Salt & Pepper as per you taste
	Instructions In microwave safe glass dish take butter, onion, green chili and cook. When beep add white sauce, chopped potatoes, sweet corn, fresh cream, salt, pepper, mix it well and sprinkle cheese. Transfer it on high rack and press start. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 28 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
4-10 Vegetable in Thai Curry	500-600 g	For green paste : Green chillies - 6~8, Spring onions - 3 ea (chopped along with the green part), Lemon grass leaves - 4 (optional), Ginger - 2" piece, Coriander leaves - 3 tbsp., For main dish : Coconut milk - 1½ cups, Salt - 1½ tsp., A tiny piece of jaggery, Coriander powder - 1 tbsp., Cumin powder - 1 tbsp., Oil - 2 tbsp., Chopped mix vegetable (carrot, cabbage, peas) - 1 cup
	Instructions In grinder prepare green paste. Churn grated one coconut in mixer. In microwave safe glass bowl add vegetables, oil and cook. When beep add salt jaggery and coconut milk. Mix well & press start.	
4-11 Mushroom Gratin	500-550 g	Mushrooms quartered (cut into 4 pieces each) - 200 g, Oil or butter - 2 tbsp., Maida (flour) - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp., Rum or sherry (optional) - 1 tsp., Cream - 100 g (½ cup), Water - ½ cup, Some chopped celery or coriander leaves for garnishing
	Instructions In microwave safe plate butter, maida and cook. When beep add all other ingredients, mix well and press start. Sprinkle chopped celery or coriander and serve hot.	
4-12 Pasta in Pesto Sauce	400-450 g	Fussily Pasta - 200 g, Oil - 1 tbsp., Cream - 1 cup, Grated cheese - 3 tbsp., Butter - 2 tbsp., Oregano - ½ tsp., Salt & pepper as per your taste, Olive Oil - 1 tbsp., Pesto Sauce - 4 tbsp., Water - 3 cups
	Instructions In microwave safe glass bowl take Pasta with water, oil and cook. When beep drain the water & keep a side. In another bowl add butter, olive oil, pasta, cream, salt, pepper powder, oregano, cheese, pesto sauce. Mix it well & press start. Serve hot.	

5. Cake & Confectionery

Code/Food	Serving Size	Ingredients
5-1 Butter Sponge	450-500 g	Refined flour - 120 g, Margarine - 90 g, Egg - 2 ea, Powder Sugar - 120 g, Baking Powder - 1 tsp., Milk as required, Vanilla essence - ¼ tsp.
	Instructions Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder thrice. Cream margarine and powdered sugar until light and fluffy. Beat egg and add to the creamed mixture little by little beating thoroughly between each addition. Fold in the shifted flour a little at a time. Adjust consistency of the batter with milk to get a dropping consistency. Put it in cake tin at low rack, when beep select menu and cook.	
5-2 Chocolate Cake	450-500 g	Refined flour - 115 g, Margarine - 55 g, Egg - 2 ea, Powder Sugar - 85 g, Baking Powder - 1 tsp., Soda Bicarb - ½ tsp., Milk as required, Cocoa powder - 2 tbsp., Chocolate essence - 1 tsp.
	Instructions Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder, cocoa powder & soda bicarb. Cream butter & sugar until light & fluffy. Add egg & beat in well. Add essence & fold in refined flour with sufficient milk to make a soft consistency. Pour in a greased & lined cake tin. Put it on low rack, when beep select menu and cook.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 29 2015-01-12 3:47:31

Code/Food	Serving Size	Ingredients
5-3 Banana Bread	450 g	Refined flour - 225 g, Margarine - 125 g, Egg - 2 ea, Powder Sugar - 200 g, Baking Powder - ½ tsp., Soda Bicarb - 1 tsp., Riped Banana - 3 ea, Walnut - 50 g, Milk as required, Vanilla essence - 1 tsp.
	Instructions Pre-heat the oven 180 °C with the convection function. Grease and dust 10" cake tin, Sieve flour with baking powder & soda bicarb. Cream butter & sugar until light & fluffy. Beat egg separately. Add gradually to creamed mixture, beating well all the time. Add mashed banana with 1 table spoon of flour. Mix well. Fold in flour. Add chopped walnuts. Pour into a greased loaf tin. Put it on low rack, When beep, select menu and cook.	
5-4 Brownie	400-450 g	Refined flour - 100 g, Butter - 75 g, Egg - 2 ea, Chopped Almonds - 3 tbsp., Powder Sugar - 80 g, Baking Powder - 1 tsp., Milk - ¼ cup, Chocolate essence - 1 tsp., Cocoa powder - 2 tbsp., Water - ½ cup
	Instructions Pre-heat the oven 200 °C with the convection function. Grease and dust 8" cake tin. Sieve flour with baking powder. Mix cocoa powder with half cup of hot water. In a bowl add powder sugar & butter & beat well. Add egg & essence & again beat well. Add almonds to Refined flour, mix well, add maida mix with butter mixture. Add cocoa solution to it & again mix well. For spoon dropping consistency add milk. Pour the mixture in a greased tin. Put it on low rack, When beep, select menu and cook.	

Code/Food	Serving Size	Ingredients
5-5 Marble Cake	450-500 g	Refined flour - 150 g, Condensed Milk - 200 g, Butter - 100 g, Soda Bicarb - ½ tsp., Baking Powder - 1 tsp., Vanilla essence - 1 tsp., Cocoa Powder - 2 tbsp., Milk or water as required
	Instructions Pre-heat the oven 200 °C with the convection function. Sieve refined flour, baking powder & soda. In a bowl add condensed milk & butter & beat well. Add refind flour, essence & mix. For spoon dropping consistency add milk or water. Divide the mixture in two parts. Add cocoa powder in one part. Put the plain batter & cocoa batter alternately in the tin. Run a spoon through the batter, put it on low rack, when beep select menu and cook.	
5-6 Coconut Toffee	300-350 g	Condensed Milk - 200 g, Fresh grated coconut - 1 cup, Chopped walnut - 100 g, Ghee - 2 tbsp.
	Instructions In microwave safe glass bowl mix the condensed milk, coconut and cook. When beep, add ghee and press start. After done add the chopped walnuts & mix well. Spread the mixture on a well greased tin. Press & level by pressing with a wet cloth. After 5 min. mark into small pieces. Remove when cold.	
5-7 German Biscuits	400-450 g	Refined flour - 170 g, Butter - 115 g, Powder sugar - 60 g, Cashew nut powder - 60 g, Almond essence - ¼ tsp.
	Instructions Pre-heat the oven 180 °C with the convection function. Sieve the flour, cream butter & sugar very well until light & creamy. Add the Almond essence & beat. Add cashew nut & sieved refined flour & mix well. The mixture will form into a dough. Roll into sticks & shape into a circle. Arrange this on baking tray. Put it on low rack, When beep, select menu and cook. Cool the biscuits. Serve them.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 30 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
5-8 Chocolate Cookies	200-225 g	Refined flour - 115 g, Margarine or butter - 60 g, Powder sugar - 60 g, Vanilla essence - ½ tsp., Baking powder - ½ tsp., Cocoa powder - 1 tbsp., Golden syrup - 1 tbsp.
	Instructions Pre-heat the oven 160 °C with the convection function. Sieve the flour with cocoa & baking powder together. Cream the margarine & sugar very well until light & creamy. Add the vanilla essence & golden syrup & beat very well. Add the flour to the mixture & mix it well. Shape the biscuit as you wish. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook.	
5-9 Almond Cookies (Pistachio)	250-300 g	Refined flour - 115 g, Margarine or butter - 50 g, Powder sugar - 50 g., Cardamom powder - ¼ tsp., Nutmeg powder - ¼ tsp., Chopped almond - 1 tbsp., Chopped Pistachio - 1 tbsp., Little saffron, Milk as required
	Instructions Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the margarine & sugar very well until light & creamy. Add the saffron, cardamom & nutmeg powder & mix very well. Add the sieved flour & make a dough. Roll out the dough using a little flour. Sprinkle a few nuts & give a light final roll. Cut into desired shape. Put it on cookie tray at low rack, When beep, select menu and cook. Cool the biscuits. Serve them.	

Code/Food	Serving Size	Ingredients
5-10 Kesar Nankatai	400 g	Refined flour - 100 g, Powder sugar - 100 g, Ghee - 100 g, Semolina - 100 g, Cardamom powder - ½ tsp., Nutmeg powder - ½ tsp., Fresh curd - 1 tsp., Soda Bicarb - ¼ tsp., Saffron - ¼ tsp., Milk - 1 tsp.
	Instructions Pre-heat the oven 180 °C with the convection function. Sieve the flour. Cream the ghee & sugar very well until light & creamy. Add the cardamom & nutmeg powder & cream it again. The saffron dissolve in a 1 tsp. of milk. Add the curd, soda bicarb & prepared saffron. Mix well. Add the flour & semolina & knead well. Make a small round. Arrange them on a baking tray. Put it on low rack, When beep, select menu and cook. Cool the biscuits. Serve them.	

The following table presents the various **Indian Recipe** (Non-Veggie) programmes and appropriate Instructions.

6. Soups & Snacks

Code/Food	Serving Size	Ingredients
6-1 Chicken Shorba	300-400 g	Boneless Chicken - 100 g, Chopped Onion - 1 (medium size), Chopped Garlic - 4~5 cloves, Oil - 1 tbsp., Cumin Seeds - ½ tsp., Water - 1 cup, Coconut Milk - 1 cup, Peppercorns - 5~6, Salt as per taste, Cream - ¼ cup, Chopped Coriander Leaves - 2 tbsp.
	Instructions In microwave safe glass bowl add oil, chopped onion, garlic cloves, cumin seeds & chicken, peppercorns. Mix well and cook. When beep add all the other ingredients, mix it well and press start.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 31 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
6-2 Chicken Soup	350-400 g	Boneless Chicken - 150 g, Ginger paste - 1 tsp., Garlic paste - 1 tsp. , Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
	Instructions In microwave safe glass bowl add oil, chicken in small pieces, ginger paste, garlic paste, corn flour paste & water, mix it well and cook. Serve hot.	
6-3 Crab Soup	400-450 g	Crab - 150 g, Ginger paste - 1 tsp., Garlic paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 350 ml
	Instructions In microwave safe glass bowl add oil, crab, ginger paste, garlic paste, corn flour paste & water, mix it well. Mix it well and cook. Serve hot.	
6-4 Chicken Manchow Soup	450-500 g	Boneless Chicken - 150 g, Ginger, Garlic, Green Chili - 1 tbsp.(small pieces), Salt & Pepper Powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Vinegar - 1 tsp., Chili sauce - ½ tsp., Soya sauce - ½ tbsp., Oil - 2 tbsp., Water - 350 ml
	Instructions In microwave safe glass bowl add oil, chicken in small pieces, ginger, garlic, green chili pieces, corn flour paste & chili sauce, soya sauce & vinegar, water, mix it well and cook. Serve hot.	
6-5 Mutton Soup	300-350 g	Boneless Mutton - 150 g, Ginger paste - 1 tsp., Garlic Paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
	Instructions In microwave safe glass bowl add oil, mutton in small pieces, ginger paste, garlic paste, corn flour paste & water, mix it well, cook. Serve hot.	

Code/Food	Serving Size	Ingredients
6-6 Herb Chicken Soup	350-400 g	Boneless Chicken - 150 g, Chopped Celery - 1 tbsp., Chopped Parsley - 1 tbsp., Oregano - ½ tsp., Chopped Coriander - 1 tbsp., Ginger Paste - 1 tsp., Garlic Paste - 1 tsp., Salt & Pepper powder as per your taste, Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Oil - 2 tbsp., Water - 300 ml
	Instructions In microwave safe glass bowl add oil, chicken in small pieces, ginger paste, garlic paste, chopped celery, chopped parsley, oregano, chopped coriander, corn flour paste & water, mix it well and cook. Serve hot.	
6-7 Tom Yum Chicken Soup	300-350 g	Chopped Boneless Chicken - 150 g, Fresh Coriander Leaves a few springs, Green or Fresh red chili - 3~4, Lemon Grass - 4 inches stalk, Lime leaves - 4~5, Salt as per your taste, Thai red curry paste - 2 tbsp., Lemon juice - 2 tbsp., Water - 350 ml
	Instructions In microwave safe glass bowl add water, boneless chicken, lemon grass, lime leaves & 2 red or green chili, salt, oil, thai red curry paste, lemon juice & cook. Serve hot.	
6-8 Fish Pepper	350-400 g	Fish slice - 300 g, Salt, Lemon juice, Pepper powder as per your taste, Oil - 3 tbsp., Chopped Onion - 4 tbsp., Chopped Tomato - 3 tbsp., Chopped Garlic - 2 tsp., Water as required, Coriander leaves - 1 tbsp.
	Instructions Marinate fish slice with salt, lemon juice & pepper powder for one hour. In microwave safe bowl put oil, chopped onion, chopped tomato, chopped garlic & cook. When beep add marinated fish, salt to taste & ¼ cup of water and press start. Garnish with chopped coriander leaves.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 32 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
6-9 Lemon Chicken	400-450 g	Boneless Chicken - 300 g, Lemon juice - 3 tbsp., Salt as per your taste, Honey - 3 tsp., Pepper powder - 1 tsp., Olive Oil - 2 tbsp., Corn Flour - 2 tbsp., Corn Flour Paste - 2 tbsp.(dissolve in ½ cup of water), Chopped Coriander leaves - 1 tbsp.
	Instructions Marinate chicken with pepper powder, salt, lemon juice & keep for one hour in refrigerator. In microwave safe bowl take olive oil, marinated chicken & mix it well, and cook. When beep, add honey, corn flour paste & press start.	
6-10 Kheema Ball	300-350 g	Boiled Chicken Kheema - 175 g, Boiled & Mashed Potato - 3 ea, Ginger, Garlic paste, Salt, Garam Masala, Coriander, Lemon juice as per your taste, Bengali Gram powder - 2 tbsp.
	Instructions Mix all the ingredients together. Make balls from it. Place the balls greased microwave multiple pan on 2nd level and cook. When beep turn over the balls and cook, serve hot.	
6-11 Chili Chicken	300-350 g	Boneless Chicken - 250 g, Chopped Ginger - ½ tsp., Chopped Garlic - ½ tsp., Vinegar - 1 tbsp., Soya sauce - 2 tbsp., Ajinomoto - ½ tsp., Green chili - 4~5 ea (slit length ways), One medium capsicum : cut into thin strips, One small onion - cut into ½" thin strips, Onion leaves - 2~3 (cut into long strips), Sugar - 1 tsp., Salt as per your taste, Sherry - 2 tsp., Corn Flour - 2 tsp.(dissolve in ½ of water), Oil - 2 tbsp.
	Instructions In microwave safe glass bowl mix oil, ajinomoto, ginger-garlic, chili, soya sauce & chicken and cook. When beep add all ingredients & ¼ cup of water, mix it well, cover it & press start. Serve hot.	

Code/Food	Serving Size	Ingredients
6-12 Ginger Chicken	300-350 g	Boneless Chicken - cut into small pieces, Soya sauce - 3 tbsp., Grated Ginger - 1 tbsp., Thinly sliced Ginger - 1 tbsp., Spring onion - 3~4 (chopped with green part), Sherry - 2 tbsp., Ajinomoto - ½ tsp., Salt as per your taste, Pepper powder - 1 tsp., Corn Flour - 2 tsp. (dissolve in ½ of water), Oil - 2 tbsp.
	Instructions In microwave safe glass bowl mix oil, chicken, grated ginger, sherry, spring onion & soya sauce. Mix it well & cover it & cook. When beep add salt, pepper & sliced ginger. Mix it well, add corn flour paste, ¼ cup of water, mix it well and press start. Serve hot.	
6-13 Schezwan Chicken	500-550 g	Boneless Chicken - 400 g, Grind red chili - 10, Oil - 3 tbsp., Garlic paste - 1 tbsp., Garlic finely - 1 tbsp. (chopped), Tomato sauce - 4 tbsp., Vinegar - 1 tbsp, Red Chili Sauce - 2 tbsp., Soya Sauce -1½ tbsp., Salt & Sugar as per your taste, Corn flour - 1 tbsp., Ajinomoto - ¼ tsp., Orange color - 1 pinch
	Instructions In microwave safe glass bowl add oil, chopped garlic, grind red chili and cook. When beep add garlic paste & all other ingredients. Mix it well & press start.	
6-14 Chicken Hong Kong	400-450 g	Boneless Chicken - 250 g (cut into bite size pieces), Cashew nut - 15~20, Dried broken red chilies - 6, Fresh garlic - 4~5 (chopped), Sherry - 2 tbsp., Salt & Sugar as per your taste, Oil - 2 tbsp., Ajinomoto - ½ tsp., Cornflour - 2 tsp.(dissolve in 1 cup of water)
	Instructions In microwave safe glass bowl add oil, ginger, soya sauce, sherry, ajinomoto, salt, sugar, chicken and cook. When beep add broken dried red chili powder, garlic, corn flour, cashew nut, all other ingredients. Mix it well and press start.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 33 2015-01-12 3:47:32

7. Indian Special Chicken Dishes

Code/Food	Serving Size	Ingredients
7-1 Mirchi Chicken	400-450 g	Chicken legs - 5~6, Chopped coriander leaves - 2 tbsp., Oil - 4 tbsp., Tomato puree - 1 cup, Sugar & salt as per your taste, Onion paste - 4 tbsp, Ginger-garlic & green chili paste - 2 tbsp., Lemon juice - 2 tsp., Garam Masala - 1 tsp.
	Instructions Marinate chicken with onion, ginger-garlic & green chili paste. Place it in refrigerator for 2-3 hrs. In microwave safe glass bowl add oil, marinated chicken & cook. When beep add tomato puree, salt, sugar, garam masala & press start. Garnish with coriander leaves & serve hot.	
7-2 Butter Chicken	500-550 g	Boneless Chicken - 400 g, Lemon juice - 1 tbsp., Kashmiri red chili powder - 1 tsp., Salt & sugar - as per your taste, Butter - 4 tbsp., Ginger-garlic paste - 2 tbsp., Garam Masala - 1 tsp., Yogurt - ½ cup, Dried fenugreek leaves - 1 tsp., Mustard oil - 2 tsp., Chopped onion paste - 1 cup, Tomato puree - ½ cup, Chopped coriander - 1 tbsp., Fresh cream - ½ cup & orange-red color - 1 pinch
	Instructions Marinate chicken with yogurt, mustard oil, lemon juice, ginger-garlic paste & place it in refrigerator for 1 hr. In microwave safe glass bowl add butter, onion paste, chicken & cook. When beep add all other ingredients, mix it well & cover it & press start. Garnish with chopped coriander.	

Code/Food	Serving Size	Ingredients
7-3 Chicken & Mushroom with Tomato	500-600 g	Boneless Chicken - 450 g, Chopped Mushroom - 8~10, Spring onion - 3~4, Finley chopped Garlic - 5~6, Chopped red chili - 1 tbsp., Pepper powder - ¼ tsp., Tomato puree - ½ cup, Honey - 2 tsp., Oregano - ¼ tsp., Butter - 2 tbsp., Salt as per your taste
	Instructions In microwave safe glass bowl take oil, garlic, chicken, salt and cook. When beep add mushroom, tomato puree & all other ingredients, mix it well. Cover it and press start. Sprinkle spring onion & serve hot.	
7-4 Chicken Jalfreji	500-600 g	Chicken - 500 g (medium size pieces), Onion - 1 (chopped), Garlic - 4~5 flakes, Tomato Puree - 4 ea, Grated Ginger - 1 tsp., Garam Masala - 1 tsp., Cumin Powder - 1 tsp., Red Chili Powder - 1 tsp., Lemon Juice - ½ tsp., Turmeric powder - 1 tsp., Oil - 3 tbsp., Capsicum - 1 ea, Cream - 1 cup
	Instructions In microwave safe glass bowl add oil, onion, ginger, garlic, haldi, chicken and cook. When beep add capsicum & all other ingredients, all spices & lemon juice except cream. Mix well and press start. After done add cream, mix it well & serve hot.	
7-5 Yogurt Chicken	500-600 g	Chicken - 500 g, Yogurt - 1 cup, Finely chopped mint leaves - 1 tbsp., Corn flour - 1 tbsp.(mix in 2 tbsp. water), Oil - 2 tbsp., Chopped onion - 1 ea, Chopped green chili - 2~3, Chopped ginger - 1 tbsp., Garam Masala - 1 tsp., Dried fenugreek leaves - 1 tsp., Salt as per your taste, Chopped coriander - 1 tbsp.
	Instructions In microwave safe glass bowl add oil, onion, green chili, ginger & chicken, mix it well & cook. When beep add all other ingredients, ½ cup of water. Cover it and press start. Sprinkle chopped mint & coriander leaves. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 34 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
7-6 Green Chicken	700-800 g	Chicken - 500 g (cut into pieces of your choice), Chopped green chili - 3~4, Chopped coriander - ½ cup, Chopped mint - ¼ cup, Two sticks chopped celery, Chopped spring onion - 2 ea, Garlic paste - 1 tsp., Ginger paste - 1 tsp., Cumin powder - 1 tsp., Oil - 3 tbsp., Salt - 1 tsp.
	Instructions Grind together mint, coriander, celery, green chili to a paste. In microwave safe glass bowl take oil, green paste & all other ingredients. Mix well and cook. When beep add ½ cup water, mix it well and press start. Serve hot.	
7-7 Kadhai Chicken	600-700 g	Chicken - 400 g (cut into pieces of your choice), Ginger-garlic paste - each 1 tsp., Tomato puree - ½ cup, Red chili powder - ½ tsp., Coriander powder - 1 tsp., Garam masala - 1 tsp., Sugar - 1 tsp., Two large capsicum cut into strips, Corn flour - 2 tbsp. (dissolve in 3 cups of water), Oil - 4 tbsp., Dried fenugreek leaves - 1 tsp.
	Instructions In microwave safe glass bowl take oil, ginger-garlic, onion, chicken, red chili powder and cook. When beep add 3 cup water, all other ingredients, mix it well and press start. Garnish with coriander leaves & serve hot.	

Code/Food	Serving Size	Ingredients
7-8 Hyderabadi Chicken	700-800 g	Chicken - 600 g (cut into pieces of your choice), Ginger-garlic paste - each 1 tsp., Tomato puree - ½ cup, Finely chopped onion - 2 ea, Finely Chopped tomato - 2 ea, Oil - 4 tbsp., Water - 1 cup, Cream - 4 tbsp., Salt as per taste, Chopped coriander leaves. For paste : Red chili - 4~5, Cashew nut - 10~12, Magaj - 2 tbsp., Poppy seeds - 1 tbsp., Almond - 7~8, Cloves - 4 ea, Cinnamon - 2 sticks, Cardamom - 2 ea, Make a fine paste of all these ingredients.
	Instructions In microwave safe glass bowl add oil, finely chopped onion, chicken with given paste and cook. When beep add all other ingredients, water, mix it well and press start. Garnish with coriander leaves. Serve hot.	

8. Tandoori

Code/Food	Serving Size	Ingredients
8-1 Roasted Prawns	600-700 g	Prawns - 500 g, Chopped onion - 2 ea, Chopped tomato - 2 ea, Oil - 2 tbsp., Red Chili powder - 1 tsp., Turmeric powder - ½ tsp., Ginger-garlic paste - each 1 tsp., Garam Masala - 1 tsp., Cumin powder - 1 tsp., Coriander powder - 1 tsp., Chopped coriander leaves - 2 tbsp. Little water
	Instructions In microwave safe glass bowl add oil, finely chopped onion, chopped tomato, ginger-garlic paste, red chili powder, turmeric powder and cook. When beep add prawns, all other ingredients mix it well, and press start. Garnish with coriander leaves. Serve hot.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 35 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
8-2 Fish Tikka	500 g	Fish (pomfert) - 400 g, Thick yogurt - ½ cup, Chat Masala - 1 tsp., Ginger-garlic paste - each 1 tsp., Orange red colour - 1 pinch, Oil - 2 tbsp., Semolina - 2 tbsp., Red chili powder - 1 tsp., Salt as per your taste, Coriander leaves - 2 tbsp.
	Instructions Marinate fish slice with salt, thick yogurt, ginger-garlic paste, orange-red colour, red chili powder, mix it well & keep it in refrigerator for ½ hr. Roll it in semolina. Put them on crusty plate at high rack, put some oil around, and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	
8-3 Goanese Fish Kabab	400-500 g	Surmai (Goanese fish) - 300 g (cut into pieces), Tamarind juice - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - ½ tsp., Cumin powder - ½ tsp., Coconut oil - 1 tbsp., Rice flour - 1 tbsp., Chopped peppercorn - 1 tsp., Salt as per your taste, Coriander leaves - 1 tbsp.
	Instructions Place fish in a bowl. Add all the ingredients & mix well. Let it marinate for 1 hr. at refrigerator. Place kebab on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	
8-4 Coconut Fish Kabab	400-500 g	Fish (pomfert) - 400 g (cut into pieces), Ginger- garlic paste - each 1 tsp., Pepper powder - ½ tsp., Cumin powder - ½ tsp., Lemon juice - 2 tbsp., Corn flour - 1 tsp., Powdered coconut (desiccated coconut) - 4 tbsp., Salt as per your taste
	Instructions In a bowl add fish pieces & all other ingredients except coconut. Mix well, late it marinate for 2-3 hrs. at room temperature. Pick fish pieces one by one & roll into the coconut so that fully coated with it. Place fish on crusty plate at high rack, put some oil around the kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	

Code/Food	Serving Size	Ingredients
8-5 Chicken Malai Kabab	400-450 g	Boneless chicken - 300 g, Garlic paste - 1 tsp., Anissed powder - 1 tsp., Dry mango powder - 1 tsp., Red chili powder - 1 tsp., Cream - 4 tbsp., Oil - 2 tbsp., Salt as per your taste, Coriander leaves - 1 tbsp.
	Instructions Place chicken in a bowl. Add all the ingredients & mix well. Let it marinate for 2 hrs. at refrigerator. Place kebab on crusty plate at high rack, put some oil around kebabs and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	
8-6 Chicken Kheema Cutlet	350-400 g	Boiled Kheema - 250 g, Boiled potato - 2 ea, Bread crumbs - 1 cup, Oil - 2 tbsp., Red chili powder - 1 tsp., Turmeric powder - 1 tsp., Ginger-garlic paste - 1 tsp., Salt as per your taste, Garam Masala - 1 tsp., Coriander leaves - 2 tbsp.
	Instructions In bowl take chicken kheema, all other ingredients except oil & mix well. Make cutlets. Put them on a metal tray, put some oil around the cutlets. Keep this on crusty plate at high rack, put some oil around the cutlets and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	
8-7 Sesame Chicken	400-500 g	Boneless chicken - 400 g (cut into pieces), Dry mango powder - 1 tsp., Red chili powder - 1 tsp., Turmeric powder - ½ tsp., Garam Masala - 1 tsp., Ginger-garlic paste - 1 tsp. each, Coconut oil - 2 tbsp., Rice flour - 1 tbsp., Salt as per your taste, Sesame seeds - 4~5, Coriander leaves - 1 tbsp.
	Instructions In a bowl add chicken, all the other ingredients except sesame seeds and mix well, let marinate for 2 hrs. at room temperature. Lift one piece at a time, roll in sesame seed so that it is fully covered. Place fish on crusty plate at high rack , put some oil around chicken and cook. When beep, turn them over and press start. Garnish with coriander leaves. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 36 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
8-8 Tandoori Mutton	500-600 g	Boneless Mutton - 500 g, Garlic paste - 1 tsp, Ginger paste-1 tsp., Red chili powder - 1 tsp., Coriander, cumin powder - 1 tsp. each, Yogurt - 1 cup, Orange-red colour - 1 pinch, Corn flour - 2 tbsp., Salt - to taste, Oil - 2 tbsp., Garnish with onion ring & lemon pieces
	Instructions In a bowl mix all ingredients except oil. Add mutton & mix well. Let it marinate for 2-3 hrs. in refrigerator. Place mutton on crusty plate at hogh rack in microwave, put some oil around and cook. When beep, turn them over and press start. Garnish with onion ring & lemon pieces. Serve hot.	
8-9 Fish Tikka Achari	450-500 g	Surmai fillets - 300 g (cut into 2" pieces), Lemon juice - 2 tbsp., Ginger-garlic paste - 1 tsp. each, Turmeric powder - ½ tsp., Kashmiri red chili powder - 2 tsp., Mustard seed powder - 1 tsp., Onion seeds powder - 1 tsp., Fenugreek seed powder - ½ tsp., Black salt - ½ tsp., Mustard oil - 2 tbsp., Yogurt whisked - 1 cup, Butter - 2 tbsp.
	Instructions Place the fish in a bowl, add salt, lemon juice, ginger-garlic paste, turmeric powder, chili powder, mustard seed powder, fenugreek seed powder, onion seed powder, mix it well & take it refrigerator for 2 hrs. Arrange the fish pieces and brush the oil, put it on crusty plate at high rack in microwave, put some oil around tikkas and cook. When beep turn the pieces, apply little oil and press start. Serve hot.	

9. All Time Favorite

Code/Food	Serving Size	Ingredients
9-1 Chicken a'la Kiev	550-600 g	Boneless chicken - 500 g, French beans - 18~20 (cut into 1 piece), Carrots - 2 (medium size, cut into 1 piece), Sticky celery - 2 (chopped), Capsicums - 2 (cut into ¼" pieces), Milk - ½ cup, Maida - 2 tbsp., Pepper - 1 tsp., Mustard powder - 1 tsp., Salt - 1 tsp., Grated cheese (Amul) - 4 tbsp.
	Instructions In microwave safe glass bowl mix chicken, carrots, celery, french beans, 2-3 tbsp. water, cover it and cook. When beep add all ingredients and press start. Add grated cheese. Garnish with parsley or coriander.	
9-2 Chicken & Mushroom Gratin	500-550 g	Boneless chicken - 200 g (cut into bite size pieces), Mushrooms quartered (cut into 4 pieces each) - 200 g, Oil or butter - 2 tbsp., Maida (flour) - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp., Rum or sherry (optional) - 1 tsp., Cream - 100 g (½ cup), Water - ½ cup, some chopped celery or coriander leaves for garnishing, grated cheese-4 tbsp.
	Instructions In microwave safe glass dish, add chicken, mushroom and all the ingredients except cheese and cook. When beep, spread grated cheese and put it on high rack and press start. Sprinkle chopped celery or coriander and serve hot.	

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 37 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
9-3 Meat Loaf	500-550 g	Keema - 500 g (Meanced meat), Curd - ¾ cup, 2 eggs, Garlic paste - 1 tsp., Ginger paste - 1 tsp., Garam masala powder - 1 tsp., Lemon juice - 2 tbsp., Chopped coriander leaves - 2 tbsp., Salt - 1 tsp., Pepper - 1 tsp.(adjust to taste), Bread slices - 3 pieces (soaked in water, squeezed & crumbled) For sauce : Maida - 1 tsp., Mustard powder - ½ tsp., Worcestershire sauce - 1 tbsp., Tomato sauce - 1 tbsp., Chili sauce - 1 tbsp.
	Instructions Mix all ingredients given under loaf. Grease the dish & put keema in it and cook. To the juices, add all ingredients given under sauce. When beep, pour the sauce on a loaf and put it on crusty plate at high rack, and press start. Serve with sauce & decorate with coriander.	
9-4 Thai Chicken	900 g	For green paste : Green chillies - 6~8, Spring onions - 3 ea (chopped along with the green part) , Lemon grass leaves - 4(optional), Ginger - 2" piece, Coriander leaves - 3 tbsp. For main dish : Boneless chicken - 700~800 g (cut into pieces), Coconut milk - 1½ cups, Salt - 1½ tsp., Jaggery - a tiny piece, Coriander powder - 1 tbsp., Cumin powder - 1 tbsp., Oil - 2 tbsp.
	Instructions In grinder prepare green paste. Churn grated one coconut in mixer. In microwave safe glass bowl add chicken, oil and cook. When beep, add salt jaggery and coconut milk. Mix well and press start.	

Code/Food	Serving Size	Ingredients
9-5 Keema Pulav	350-400 g	Keema - 200 g, Basmati Rice - 1 cup, Ghee - 4 tbsp, Cloves - 5 laung, Green cardamoms (broken) - 4, Ginger paste - 1 tbsp., Cinnamon - 1" piece, Bay leaf - 1, Onion - 1 (sliced thinly), Red chili powder - 1 tsp., Salt - 1 tsp., Garam masala - 1 tsp.
	Instructions In microwave safe glass bowl mix ghee, laung, dalchini, bay leaf, cardmoms, rice, onion and cook. When beep, add keema, rice, water, mix it well and press start. Serve hot.	
9-6 Chicken with Sweet & Sour Vegetables	400-450 g	Boneless Chicken - 500 g, Pineapple juice - ½ cup, Baby corns (cut into lengthwise) - 3~4, Broccoli/ cauliflower - 4~5, Mushrooms - 3~4 (cut into pieces), Slices of pineapple - 2 ea, Small capsicum - 1 ea (cut into pieces), Red chili paste - ½ tsp., Crushed garlic - 1½ tsp., Spring onion white - 2-3 (cut into slices), Tomato ketchup - ¼ cup, Vinegar - 3 tbsp., Ajinomoto - ¼ tsp., Sugar - 4 tsp., Soya sauce - 1 tsp., Salt to taste, Stock cube - 1 crushed, Corn flour - 4 tbsp. (mixed in ¼ cup of water)
	Instructions In microwave safe glass bowl add 1 ½ cups water, pineapple juice, baby corn, florets, mushrooms and cook. When beep add chicken, all other ingredients. Mix it well and press start. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 38 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
9-7 Chicken in Thai Red Curry	500-550 g	Boneless chicken - 400 g, Kashmiri red chili - 4~5 dry, Onion - ½, Garlic - 8~10 flakes, Chopped ginger - 1 tsp., Lemon grass - 1 , Coriander seeds - 1½ tsp., Cumin seeds - 1 tsp., Saboot kali mirch - 6, Soya sauce - ½ tsp., Lemon juice - 1 tbsp., Salt & sugar - each 1 tsp., Baby corns - 4~5, Small carrot - 1 ea, Cauliflower - ½ cup, Mushrooms - 2 ea, Basil leaves - 8~10, Coconut milk - 2 cups
	Instructions Make fine paste of red chili, water. In microwave safe glass bowl add oil, red curry paste, onion, ginger-garlic paste and cook. When beep add coconut milk, all vegetables, all other ingredients with chicken and press start. Add salt, sugar, add basil leaves. Serve hot with steamed rice.	
9-8 Chicken in Hot Garlic Sauce	500-550 g	Boneless chicken - 250 g, Capsicum - 1 ea (cut into pieces), Oil - 3 tbsp., Garlic - 1 tbsp.(chopped), Dry red chili - 1 ea (cut into thin slices), Red chili paste - 1 tsp., Spring onion - 1 ea, Tomato ketchup - 3 tbsp., Red chili sauce - 1 tbsp., Soya sauce - 2 tsp., Vinegar - 1 tbsp., Pepper - ½ tsp., Sugar - ½ tsp., Corn flour - 4 tbsp. (dissolve in ½ cup of water)
	Instructions In microwave safe glass bowl put chicken, capsicum, oil, chopped ginger-garlic, ½ cup of water and cook. When beep add all other ingredients, ¼ cup of water, cover it and press start.	

Code/Food	Serving Size	Ingredients
9-9 Chicken with Tomato Rice	550-600 g	Boneless chicken - 150 g, Soaked rice - 1 cup, Sprouted green gram - ½ cup, Finely chopped carrot - ½ cup, Finely chopped French beans - ½ cup, Oil - 2 tbsp., Peanuts - 3 tbsp., Cumin - ½ tsp., Slices of Onion - 1 small, Tomato puree - 4 tbsp., Tomatoes - 2 ea, Turmeric - 1 pinch, Garlic paste - ½ tsp., Garam Masala - ½ tsp, Salt - 1 tsp.
	Instructions In microwave safe glass bowl take oil, add soaked rice, chicken, onion, sprouted green gram and cook. When beep add all other ingredients, 3 cups of water and press start. Serve hot.	
9-10 Crispy Chicken	450-500 g	Chicken - 250 g, Beat in Egg - 1 ea, Salt - ¼ tsp., Red chili powder - ¼ tsp., Bread crumbs - ½ cup, Oil - 1-2 tbsp. For Marinade : Butter - 2 tbsp., Garlic paste - 2 tsp., Chili powder - 1 ½ tsp., Cumin seeds powder - 1 tsp., Coriander powder - 2 tsp., Cinnamon - 1 tsp., Salt - 1½ tsp.
	Instructions Marinated chicken with all marinade ingredients & put it in refrigerator for 1 hr. Roll out the marinated chicken in bread crumbs and place them over crusty plate, grease them with a little oil and put the crusty plate on high rack and press start. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 39 2015-01-12 3:47:32

0. Indian Famous Variety

Code/Food	Serving Size	Ingredients
0-1 Naan Badami	200-250 g	Refine flour - 200 g, Curd - 2 tbsp, yeast- 1 tsp, sugar- 1 pinch, blanched & sliced almonds- 1 tsp, oil - 1 tsp, luke warm water - enough to make dough, salt as per taste
	Instructions In a small bowl add yeast, 2 tbsp. luke warm water, sugar and ½ tsp. oil, keep aside for 20 min. After 20 min in a bowl add all the ingredients and yeast except almonds. Make a dough and keep aside for 2 to 3 hours to double its size. Preheat microwave at 200 °C along with crusty plate on low rack. Divide the dough into 6 equal portions. Roll out each ball into oval shape naan and spread blanched almonds. Put it on crusty plate on low rack and cook on combination mode (micro 300w + convection200 °C) for 4 minutes after beep cook again at convection mode at 200 °C for 5 min. Brush up with oil or ghee and serve hot.	
0-2 Mutton Tetrazini	500-550 g	Mutton - 250 g, Spaghetti - 100 g, Oil - 2 tbsp., Green capsicum - 1 small sized, Red capsicum - 1 small sized, Yellow capsicum - 1 small sized, Mushrooms - 4~5, Onion - 1 large sized, Garlic - 5-6 cloves, Basil Leaves - 5~6, Tomatoes - 4 medium size, Olive oil - 4 tbsp., Pepper powder - ½ tsp., Salt to taste, Grated Cheese - ⅓ cup
	Instructions In microwave safe bowl mix oil, salt, mutton, 1 cup of water, cover it and cook. When beep add chopped capsicum, mushroom, onion, garlic, basil, tomato, pepper powder, salt, grated cheese and press start. Serve hot.	

Code/Food	Serving Size	Ingredients
0-3 Mutton Mirchi	800-900 g	Boneless Mutton - 600 g, Cashewnuts - ½ cup, Green chillies - 2~3, Fresh coriander leaves - 1 few springs, Yogurt - 1 cup, Ginger-garlic paste - 2 tsps., Red chilli powder - 1 tsp., Coriander powder - 2 tsp., Salt to taste, Oil - 2 tbsp., Bay leaf - 1, Cloves - 4~5, Green cardamoms - 4~5, Garam masala powder - 1 tsp, White pepper powder - ¼ tsp., Fresh cream - ⅓ cup
	Instructions Make a paste of green chili, coriander and spring onion. In microwave safe glass bowl add oil, boneless mutton, green paste, ½ cup of water and cook. When beep add all other ingredients and press strat.	
0-4 Bombay Prawn	700-750 g	Prawns - 500 g, Ginger-garlic - each 1 tsp., Cumin seeds - 1 tsp., Red chilies whole - 12~15, Cloves - 7~8, Cinnamon - 2 inch stick, Mustard seeds - 1 tsp., Vinegar - 4 tbsp., Chopped Onions - 2 medium size, Chopped tomato - 4 medium size, Oil - ½ cup, Sugar - 2 tbsp., Salt to taste
	Instructions In microwave safe glass bowl take oil, chopped onion, chopped tomato, cumin seeds, ginger-garlic paste, cloves, cinnamon, cumin seeds, mustard seeds, chili, prawns and cook. When beep add vinegar, salt, sugar, mix it well and press start. Serve hot.	
0-5 Chicken Vindaloo	650-700 g	Boneless Chicken - 500 g (cut into pieces), Dry red chilies - 6~7, Vinegar - 3 tbsp., Chopped Onion - 2 ea, Garlic & ginger paste - each 1 tsp., Tomato puree - ¼ cup, Potato - 1 ea, Oil - 3 tbsp., Stick cinnamon - 2", Cumin powder - 1 tsp., Turmeric powder - ½ tsp., Salt - 1 ½ tsp., Water - ½ cup
	Instructions In microwave safe glass bowl take oil, stick cinnamon, turmeric powder, garlic-ginger paste, chopped onion, chicken and cook. When beep add potato, tomato puree, cumin powder & half cup of water. Mix it well and press start. Serve hot.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 40 2015-01-12 3:47:32

Code/Food	Serving Size	Ingredients
0-6 Dum Chicken Kali Mirch	600-650 g	Chicken - 400 g (cut into 8 pieces) Marinade : Thick yogurt - ½ cup, Almonds - 8~10 (ground to powder), Ginger-garlic paste - 1 tbsp., Oil - 1 tbsp., Red chili powder - ½ tsp., Salt - ¾ tsp., Garama masala powder - ½ tsp. Other ingredients : Oil - 3 tbsp., Peppercorns - ½ tsp., Onion paste - 2 ea, Coriander powder - 1 tsp.
	Instructions In microwave safe glass bowl take oil, chicken & marinated ingredients. Mix it well & keep it in refrigerator for 1 hr. and cook. When beep mix it well and press start. Serve hot.	
0-7 Badami Tangri	550-600 g	Drumsticks - 5 (500 g chicken legs) First marinade : Lemon juice - 2 tbsp., Oil - 1 tbsp., Salt - ½ tsp., Red chili powder - ½ tsp. Second Marinade : Yogurt - ½ cup, Oil - 2 tbsp., Ginger-garlic paste - 2 tbsp., Almonds ground to powder - 8~10, Thick cream - ¼ cup, Corn flour - 1 tbsp., Salt - ¾ tsp., Chopped coriander - 2 tbsp., Dry fenugreek leaves - 2 tsp.
	Instructions In microwave safe glass bowl take drum stick & add 1st marinade material, mix it well & keep it in refrigerator for 1 hr. After 1 hr. take 2nd marinatde & keep it in refrigerator for 1 hr. Arrange drum stick in metal tray. Apply little oil & place it on crusty plate at high rack, put some oil around, and cook. When beep turn it and press start. Serve hot.	

Code/Food	Serving Size	Ingredients
0-8 Chicken Hot & Sour Soup	350-400 g	Chicken - 100 g (cut into 2-3 pieces), Water - 4 cups, Salt as per your taste. Other ingredients : Oil - 1 tbsp., Crushed garlic -¾ tsp., Red chili paste - ½ tsp., Chopped cabbage - 2 tbsp., Grated carrot - 2 tbsp., 1 Chicken soup cubes crushed, Sugar - 1 tsp., Pepper - ¼ tsp. Soya sauce - ½ tsp., Tomato ketchup - 1 tbsp., White vinegar - 1 tbsp., Corn flour (dissolve ¼ cup of water) - 4 tbsp.
	Instructions In microwave safe glass bowl take chicken, water, salt and cook. When beep add all other ingredients and press start. Serve hot.	
0-9 Schezwan Prawns	450-500 g	Prawns - 200 g, Red chili paste - 2 tbsp., Tomato sauce - 4 tbsp., Soya sauce - 1 tbsp., Ajinomoto - ¼ tsp., Sugar - 2 tsp., Salt as per your taste, Water - 1 cup, Oil - 2 tbsp., Pepper powder - ¼ tsp., 1" ginger chopped, Garlic - 5~6 (chopped), Green chili - 1 tsp., Spring onion - 2 tbsp. (chopped), Water - ½ cup, Corn flour - 2 tbsp. (dissolve in 1 cup water), Vinegar - 1 tbsp.
	Instructions In microwave safe glass bowl take prawns, ginger, garlic, green chili, water and cook. When beep add all other ingredients. Mix it well and press start.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 41 2015-01-12 3:47:32

USING THE CURD/DOUGH PROOF FEATURES

The 5 **Curd/Dough Proof** features provide pre-programmed cooking times.
You do not need to set either the cooking times or the power level.
You can adjust the Curd / Dough Proof category by pressing the **Up** or **Down** button after press the **Curd/Dough Proof** button.

First, place the food in the centre of the turntable and close the door.

	**1.** Press the **Curd/Dough Proof** button.
	**2.** Select the type of food that you are cooking by **Up** or **Down** button. No.1 is Curd and No.2 is Dough Proof. You have to choose the number that you want to use for cooking by pressing the **Up** or **Down** button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Select** button to select the type of food.
	3. Select the food by pressing the **Up** or **Down** button.
	4. Press the **START/+30s** button.

Turntable is not operating during curd cooking.

The following table presents how to use the auto programmes for rising yeast dough or curd.

1. Curd

Code/Food	Serving Size	Instructions
1-1 Large Glass Bowl	500 g	Distribute 150 g curd into 5 ceramic cups or small glass jars evenly (30 g each). Add 100 ml milk into each cup. Use long-life milk (room-temperature; 3,5 % fat). Cover each with cling film and set in a circle on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.
1-2 Clay Pots	500 g	Mix 150 g curd with 500 ml long-life milk (room-temperature; 3,5 % fat). Pour evenly into large glass bowl. Cover with cling film and set on turntable. After finish, keep 6 hours in a refrigerator. For the first time we recommend to use dried yoghurt bacteria ferment.

2. Dough Proof

Code/Food	Serving Size	Instructions
2-1 Pizza Dough	300-500 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
2-2 Cake Dough	500-800 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.
2-3 Bread Dough	600-900 g	Put dough in suitable sized bowl and set on the low rack. Cover with aluminium foil.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 42 2015-01-12 3:47:33

USING THE POWER DEFROST FEATURES

The 5 **Power Defrost** features enables you to defrost meat, poultry, fish, bread, cake and fruit. The defrost time and power level are set automatically.
You simply select the programme and the weight.

Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.

	**1.** Press the **Power Defrost** button.
	**2.** Select the type of food that you are cooking by pressing the **Up** or **Down** button. Refer to the table on the following page for a description of the various pre-programmed settings. At that time, press the **Select** button to select the type of food.
	3. Select the size of the serving by pressing the **Up** or **Down** button.
	4. Press the **START/+30s** button. **Result:** • Defrosting begins. • The oven beeps through defrosting to remind you to turn the food over. (except fruit)
	5. If oven will beep and operate stop, must turn the food over (ex: Meat, Poultry, Fish). And press the **START/+30s** button again to finish defrosting. **Result:** When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

The following table presents the various **Power Defrost** programmes, quantities and appropriate instructions. Remove all kind of package material before defrosting.
Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread, cake and fruit on kitchen paper.

Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for lamb, pork, steaks, chops, minced meat. Stand for 20-90 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions. Stand for 20-90 minutes.
3 Fish	200-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 20-80 minutes.
4 Bread/Cake	125-1000 g	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 10-60 minutes.
5 Fruit	100-600 g	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits. Stand for 5-20 minutes.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 43 2015-01-12 3:47:33

USING THE ROTI/NAAN FEATURES

The 2 **Roti/Naan** features provide pre-programmed cooking times. You do not need to set either the cooking times or the power level.

Use only recipients that are microwave-safe.

Open the door. Place the food in the centre of the turntable. Close the door.

	**1.** Press the **Roti/Naan** button.
	2. Press the **Up** or **Down** button to select cook category.
	3. Press the **START/+30s** button. **Result:** The food is cooked according to the pre-programmed setting selected. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

Code/Food	Serving Size	Ingredients
1 Roti	8 pieces	Whole wheat flour - 4 cups, Water as required for dough, Ghee - 50 g, Salt to taste
	Instructions Preheat oven and crusty plate with high rack. In a bowl add flour, salt and ghee. Kneadwith sufficient water and make smooth dough. Cover and leave for ½ hour. Divide into 8 equal balls, roll out with the help of a rolling pin and make rotis. When beep, apply a little water at one side of roti and place that side down on the crusty plate and cook. Serve hot with butter. Repeat the same process until all the naan has been prepared.	
2 Naan	8 pieces	All-purpose flour - 4 cups, Sugar - 1 tbsp., Hot water (but not boiling, just hot tap water) - ¼ cup, Active dry yeast - ¾ tsp., Warm milk - ¾ cup, Melted butter for brushing (may use olive oil), Fresh garlic or other herbs for topping
	Preheat oven and crusty plate with high rack. Combine the warm water with the sugar and yeast. Let sit for 10 minutes until foamy. It should smell like bread. In a bowl add the flour, warm milk and yeast mixture. Mix with a wooden spoon until dough starts to come together and then finish mixing the dough with your hands until a smooth but still sticky ball forms. Cover the dough with a damp towel or plastic wrap and let sit in a warm place for 2 to 3 hour. After 2 to 3 hours dough will be double to its size, punch the dough down and divide into eight equal balls. Using a rolling-pin, roll each piece of dough into an oval shape. The dough should be about 6-8 inches long and about ¼-inch thick, but no thinner. Repeat this method with the rest of the dough. When beep, place the dough on the hot crusty plate and cook. Take out cooked naan after 4 min. Serve hot with butter. Repeat the same process until all the naan has been prepared.	

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 44 2015-01-12 3:47:33

CONVECTION

The convection mode enables you to cook food in the same way as in a traditional oven. The microwave mode is not used. You can set the temperature, as required, in a range varying from 40 °C to 200 °C. The maximum cooking time is 60 minutes.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and browning, if you use the low rack.

Check that the heating element is in the horizontal position. Open the door and place the recipient on the low rack and set on turntable.

	1. Press the **Convection** button. **Result:** The following indications are displayed: (convection mode) 180 °C (temperature)
	2. Set the temperature by pressing the **Up** or **Down** button. (Temperature : 40~200 °C, 10 °C interval) • If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.
	**3.** Press the **Select** button.
	4. Set the cooking time by pressing the **Up** or **Down** button. (If you want to preheat the oven, omit this step.)
	5. Press the **START/+30s** button. **Result:** Cooking starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

GRILLING

The grill enables you to heat and brown food quickly, without using microwaves.

- Always use oven gloves when touching the recipients in the oven, as they will be very hot.
- You can get better cooking and grilling results, if you use the high rack.

	1. Open the door and place the food on the rack.
	2. Press the **Grill** button. **Result:** The following indications are displayed: (grill mode) • You cannot set the temperature of the grill.
	3. Set the grilling time by pressing the **Up** or **Down** button. • The maximum grilling time is 60 minutes.
	4. Press the **START/+30s** button. **Result:** Grilling starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 45 2015-01-12 3:47:34

COMBINING MICROWAVE AND GRILL

You can also combine microwave cooking with the grill, to cook quickly and brown at the same time.

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

You can improve cooking and grilling, if you use the high rack.

Open the door. Place the food on the rack best suited to the type of food to be cooked. Place the rack on the turntable. Close the door.

	**1.** Press the **Combi** button. **Result:** The following indications are displayed: Cb - 1 (Microwave + Grill)
	**2.** Make the display indicating Cb - 1 by pressing the **Up** or **Down** button, and then press the **Select** button. **Result:** The following indications are displayed: (microwave & grill combi mode) 600 W (output power)
	**3.** Select the appropriate power level by pressing the **Up** or **Down** button until the corresponding output power is displayed (600, 450, 300 W). At that time, press the **Select** button to set the power level. • You cannot set the temperature of the grill. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.
	4. Set the cooking time by pressing the **Up** or **Down** button. • The maximum cooking time is 60 minutes.
	5. Press the **START/+30s** button. **Result:** • Combination cooking starts. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

COMBINING MICROWAVE AND CONVECTION

Combination cooking uses both microwave energy and convection heating. No preheating is required as the microwave energy is immediately available.

Many foods can be cooked in combination mode, particularly:

- Roast meats and poultry
- Pies and cakes
- Egg and cheese dishes

ALWAYS use microwave-safe and oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

ALWAYS use oven gloves when touching the recipients in the oven, as they will be very hot.

You can get better cooking and browning, if you use the low rack.

Open the door. Place the food on the turntable or on the low rack which should then be placed on the turntable. Close the door. The heating element must be in the horizontal position.

	1. Press the **Combi** button. **Result:** The following indications are displayed: Cb - 1 (Microwave + Grill)
	**2.** Make the display indicating Cb - 2 by pressing the **Up** or **Down** button, and then press the **Select** button. **Result:** The following indications are displayed: (microwave & convection combi mode) 600 W (output power)
	**3.** Select the appropriate power level by pressing the **Up** or **Down** button until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the **Select** button to set the power level. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 46 2015-01-12 3:47:34

	**4.** Select the appropriate temperature by pressing the **Up** or **Down** button. (Temperature : 200~40 °C) At that time, press the **Select** button to set the temperature. • If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.
	5. Set the cooking time by pressing the **Up** or **Down** button. • The maximum cooking time is 60 minutes.
	6. Press the **START/+30s** button. **Result:** • Combination cooking starts. • The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute.

CHOOSING THE ACCESSORIES

	Traditional convection cooking does require cookware. You should, however, use only cookware that you would use in your normal oven. Microwave-safe containers are not usually suitable for convection cooking; don’t use plastic containers, dishes, paper cups, towels, etc.

If you wish to select a combined cooking mode (microwave and grill or convection), use only recipients that are microwave-safe and oven-proof.

For further details on suitable cookware and utensils, refer to the Cookware Guide on page 51.

USING THE CHILD LOCK FEATURES

Your microwave oven is fitted with a special child lock programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.

	1. Press the **Up** and **Down** button at the same time. (One second) **Result :** • The oven is locked (no functions can be selected). • The display shows “L”.
	2. To unlock the oven, press the **Up** and **Down** button at the same time. (One second) **Result :** The oven can be used normally.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 47 2015-01-12 3:47:35

USING THE MANUAL CRUSTY COOK FUNCTION

Normally when cooking in microwave oven, using grill or microwave mode in grill/ convection ovens, foods like pastries and pizza become soggy from button side. Using the Samsung Crusty plate helps to gain a crispy cookde result of your food.
The crusty plate can also be used for bacon, eggs, sausages, etc.

Crusty plate Low rack High rack

Combi / Select	**1.** Preheat the crusty plate, as described above. **2.** Brush the plate with oil if you are cooking food, such as bacon and eggs, in order to brown the food nicely. **3.** Place the food on the crusty plate. **4.** Place the crusty plate on the metal rack (or turntable) in the microwave. **5.** Press the **Combi** Button. Select the combi mode by pressing **Up** and **Down** button. After then Press the **Select** button. Cb - 1 (Microwave + Grill) Cb - 2 (Microwave + Convection)
Select	**6.** Select the appropriate power level by pressing the **Up** or **Down** button until the appropriate output power. At that time, press the **Select** button to set the power level. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage.
Select	**7.** If use the MW+Convection mode, select the appropriate temperature by pressing the **Up** and **Down** button. At that time, press the **Select** button to set temperature. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)
	8. Select the cooking time by press **Up** and **Down** button until the appropriate cooking time is displayed.
/+30s START	**9.** Press the **START/+30s** button. **Result:** Cooking starts. • When cooking has finished, the oven will beep and flash “End” four times. The oven will then beep one time per minute.

- Before using the crusty plate, preheat it by selecting the combination mode for 3 to 5 minutes:
  - Combination of convection (200 °C) and microwaves. (600 W power level)
  - Combination of grill and microwaves. (600 W power level)
- Use oven gloves at all times as the crusty plate will become very hot.
- Please note that the crusty plate has a teflon layer which is not scratch-resistant. Do not use any sharp objects like a knife to cut on the crusty plate.
- Use plastic accessories to avoid scratches on the surface of the crusty plate or remove the food from the plate before cutting.
- Do not place any recipients on the crusty plate that are not heat-resistant (plastic bowls for example).
- Never place the crusty plate in the oven without the turntable.
- **How to clean the Crusty Plate**
  Clean the crusty plate with warm water and detergent and rinse off with clean water.
- Do not use a scrubbing brush or a hard sponge otherwise the top layer will be damaged.
- **Please note**
  The crusty plate is not dishwasher-safe.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 48 2015-01-12 3:47:35

SPIT-ROASTING

The barbecue spit is useful for grilling, as you do not need to turn the meat over. It can be used for combined microwave and Convection cooking.

Make sure that the weight of the meat is evenly distributed on the spit and that the spit rotates evenly.
Always use oven gloves when touching the recipients in the oven, as they will be very hot.

	1. Push the roasting spit through the centre of the meat. **Example:** Push the spit between the backbone and breast of a chicken. Place the spit on its upright on the glass bowl the glass bowl and the glass bowl onto the turntable. To help brown the meat, brush it with spices and oil.
	2. Press the **Combi** button. **Result:** The following indications are displayed: Cb - 1 (Microwave + Grill)
	**3.** Make the display indicating Cb - 2 by pressing the **Up** or **Down** button, and then press the **Select** button. **Result:** The following indications are displayed: (microwave & convection combi mode) 600 W (output power)
	**4.** Select the appropriate power level by pressing the **Up** or **Down** button until the corresponding output power is displayed (600, 450, 300, 180, 100 W). At that time, press the **Select** button to set the power level. • If don't set the power level within 5 seconds, Automatically changes to the cooking time setting stage. (Default: 180 °C)
	**5.** Select the appropriate temperature by pressing the **Up** or **Down** button. (Temperature : 200~40 °C) At that time, press the **Select** button to set the temperature. • If don't set the temperature within 5 seconds, Automatically changes to the cooking time setting stage.
	6. Set the cooking time by pressing the **Up** or **Down** button. • The maximum cooking time is 60 minutes.
	7. Press the **START/+30s** button. **Result:** • Combination cooking starts. • The oven is heated to the required temperature and then microwave cooking continues until the cooking time is over. • When cooking has finished, the oven will beep and flash “End” 4 times. The oven will then beep one time per minute. • When the meat has been fully cooked, carefully remove the spit, using oven gloves to protect your hands.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 49 2015-01-12 3:47:35

USING THE VERTICAL MULTI-SPIT

MULTI-SPIT FOR KEBAB

Using the multi-spit with 6 kebab skewers you can easily barbecue meat, poultry, fish, vegetables (like onions, peppers or courgettes) and fruit which have been cut into pieces. You can prepare the above food with the kebab skewers by using convection or combination mode.



Coupler Kebab, Skewer



Multi-Spit



Barbecue Spit



Glass Bowl

USE OF THE MULTI-SPIT WITH KEBAB SKEWERS

1.	For preparing kebabs with the multi-spit use the 6 skewers.
2.	Put the same amount of food on each skewer.
3.	Place the roasting-spit into the glass bowl and insert the multi-spit into it.
4.	Put the glass bowl with the multi-spit in the centre of the turntable.

Make sure that the grill heating element is in the right position at the back wall of the cavity and not at the top before starting the grilling process.

REMOVING THE MULTI-SPIT FROM THE OVEN AFTER GRILLING

1.	Use oven gloves for taking for glass bowl with the multi-spit out of the oven, because it will be very hot.
2.	Remove multi-spit out of the spit stand by using oven gloves as well.
3.	Carefully remove the skewers and use a fork for removing the food pieces from the skewers.

The multi--is not suitable for cleaning in the dishwasher. Therefore clean it with warm water and washing up liquid by hand. Remove the vertical multi-spit from the oven, after use.

USING THE DEODORISATION FEATURES

Use the feature after cooking odorous food or when there is a lot of smoke in the oven interior. First clean the oven interior.

	1. Press the **Deodorisation** button than it will start automatically, after you have finished cleaning.

The deodorisation time has been specified as 5 minutes.

You can also adjust **Deodorisation** time by pressing the **START/+30s** button.

The maximum deodorisation time is 15 minutes.

SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

	1. Press the **START/+30s** and **STOP/ECO** button at the same time. (One second) **Result:** The oven does not beep to indicate the end of a function.
	2. To switch the beeper back on, press the **START/+30s** and **STOP/ECO** buttons again at the same time. (One second) **Result:** The oven operates normally.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 50 2015-01-12 3:47:36

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.
Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended ✓✗ : Use caution ✗ : Unsafe

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 51 2015-01-12 3:47:36

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.
The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:
Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:
Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking
To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times
After cooking is over food the standing time is important to allow the temperature to even out within the food.

Cooking Guide for frozen vegetables

Use a suitable glass pyrex bowl with lid. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer.
Stir twice during cooking and once after cooking. Add salt, herbs or butter after cooking. Cover during standing time.

Food	Serving Size	Power	Time (min.)
Spinach	150 g	600 W	5-6
	Instructions Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Broccoli	300 g	600 W	8-9
	Instructions Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.		
Peas	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Green Beans	300 g	600 W	7½-8½
	Instructions Add 30 ml (2 tbsp.) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Carrots/Peas/ Corn)	300 g	600 W	7-8
	Instructions Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		
Mixed Vegetables (Chinese style)	300 g	600 W	7½-8½
	Instructions Add 15 ml (1 tbsp.) cold water. Serve after 2-3 minutes standing.		

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 52 2015-01-12 3:47:37

Cooking Guide for fresh vegetables

Use a suitable glass pyrex bowl with lid. Add 30-45 ml cold water (2-3 tbsp.) for every 250 g unless another water quantity is recommended – see table. Cook covered for the minimum time – see table. Continue cooking to get the result you prefer. Stir once during and once after cooking. Add salt, herbs or butter after cooking. Cover during a standing time of 3 minutes.

Hint: Cut the fresh vegetables into even sized pieces. The smaller they are cut, the quicker they will cook.

Food	Serving Size	Power	Time (min.)
Broccoli	250 g 500 g	900 W	4½-5 7-8
	Instructions Prepare even sized florets. Arrange the stems to the centre. Serve after 3 minutes standing.		
Brussels Sprouts	250 g	900 W	6-6½
	Instructions Add 60-75 ml (5-6 tbsp.) water. Serve after 3 minutes standing.		
Carrots	250 g	900 W	4½-5
	Instructions Cut carrots into even sized slices. Serve after 3 minutes standing.		
Cauliflower	250 g 500 g	900 W	5-5½ 7½-8½
	Instructions Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Serve after 3 minutes standing.		
Courgettes	250 g	900 W	4-4½
	Instructions Cut courgettes into slices. Add 30 ml (2 tbsp.) water or a knob of butter. Cook until just tender. Serve after 3 minutes standing.		
Egg Plants	250 g	900 W	3½-4
	Instructions Cut egg plants into small slices and sprinkle with 1 tablespoon lemon juice. Serve after 3 minutes standing.		
Leeks	250 g	900 W	4-4½
	Instructions Cut leeks into thick slices. Serve after 3 minutes standing.		
Mushrooms	125 g 250 g	900 W	1½-2 2½-3
	Instructions Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Serve after 3 minutes standing.		
Onions	250 g	900 W	5-5½
	Instructions Cut onions into slices or halves. Add only 15 ml (1 tbsp.) water. Serve after 3 minutes standing.		
Pepper	250 g	900 W	4½-5
	Cut pepper into small slices.		
Potatoes	250 g 500 g	900 W	4-5 7-8
	Instructions Weigh the peeled potatoes and cut them into similar sized halves or quarters. Serve after 3 minutes standing.		
Turnip Cabbage	250 g	900 W	5½-6
	Instructions Cut turnip cabbage into small cubes. Serve after 3 minutes standing.		

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 53 2015-01-12 3:47:37

Cooking Guide for rice and pasta

Rice: Use a large glass pyrex bowl with lid - rice doubles in volume during cooking. Cook covered.
After the cooking time is over, stir before standing time and salt or add herbs and butter.
Remark: the rice may not have absorbed all water after the cooking time is finished.

Pasta: Use a large glass pyrex bowl. Add boiling water, a pinch of salt and stir well. Cook uncovered.
Stir occasionally during and after cooking. Cover during standing time and drain thoroughly afterwards.

Food	Serving Size	Power	Time (min.)
White Rice (Parboiled)	250 g 375 g	900 W	15-16 17½-18½
	Instructions Add cold water of double quantity. Serve after 5 minutes standing.		
Brown Rice (Parboiled)	250 g 375 g	900 W	20-21 22-23
	Instructions Add cold water of double quantity. Serve after 5 minutes standing.		
Mixed Rice (Rice + Wild Rice)	250 g	900 W	16-17
	Instructions Add 500 ml cold water. Serve after 5 minutes standing.		
Mixed Corn (Rice + Grain)	250 g	900 W	17-18
	Instructions Add 400 ml cold water. Serve after 5 minutes standing.		
Pasta	250 g	900 W	10-11
	Instructions Add 1000 ml hot water. Serve after 5 minutes standing.		

REHEATING

Your microwave oven will reheat food in a fraction of the time that conventional ovens hobs normally take.
Use the power levels and reheating times in the following chart as a guide. The times in the chart consider liquids with a room temperature of about +18 to +20 °C or a chilled food with a temperature of about +5 to +7 °C.

Arranging and covering

Avoid reheating large items such as joint of meat - they tend to overcook and dry out before the centre is piping hot. Reheating small pieces will be more successful.

Power levels and stirring

Some foods can be reheated using 900 W power while others should be reheated using 600 W, 450 W or even 300 W.
Check the tables for guidance.
In general, it is better to reheat food using a lower power level, if the food is delicate, in large quantities, or if it is likely to heat up very quickly (mince pies, for example).
Stir well or turn food over during reheating for best results. When possible, stir again before serving.
Take particular care when heating liquids and baby foods. To prevent eruptive boiling of liquids and possible scalding, stir before, during and after heating. Keep them in the microwave oven during standing time. We recommend putting a plastic spoon or glass stick into the liquids. Avoid overheating (and therefore spoiling) the food. It is preferable to underestimate cooking time and add extra heating time, if necessary.

Heating and standing times

When reheating food for the first time, it is helpful to make a note of the time taken - for future reference.
Always make sure that the reheated food is piping hot throughout.
Allow food to stand for a short time after reheating - to let the temperature even out.
The recommended standing time after reheating is 2-4 minutes, unless another time is recommended in the chart.
Take particular care when heating liquids and baby food. See also the chapter with the safety precautions.

REHEATING LIQUIDS

Always allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to even out. Stir during heating, if necessary, and ALWAYS stir after heating. To prevent eruptive boiling and possible scalding, you should put a spoon or glass stick into the beverages and stir before, during and after heating.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 54 2015-01-12 3:47:37

REHEATING BABY FOOD

BABY FOOD:

Empty into a deep ceramic plate. Cover with plastic lid. Stir well after reheating! Let stand for 2-3 minutes before serving. Stir again and check the temperature. Recommended serving temperature: between 30-40 °C.

BABY MILK:

Pour milk into a sterilised glass bottle. Reheat uncovered. Never heat a baby's bottle with teat on, as the bottle may explode if overheated. Shake well before standing time and again before serving ! Always carefully check the temperature of baby milk or food before giving it to the baby. Recommended serving temperature: ca. 37 °C.

REMARK:

Baby food particularly needs to be checked carefully before serving to prevent burns. Use the power levels and times in the next table as a guide lines for reheating.

Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup) 300 ml (2 cups) 450 ml (3 cups) 600 ml (4 cups)	900 W	1-1½ 2-2½ 3-3½ 3½-4
	Instructions Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Serve after 1-2 minutes standing.		
Soup (Chilled)	250 g 350 g 450 g 550 g	900 W	2½-3 3-3½ 3½-4 4½-5
	Instructions Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Serve after 2-3 minutes standing.		
Stew (Chilled)	350 g	600 W	4½-5½
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 2-3 minutes standing.		
Pasta with Sauce (Chilled)	350 g	600 W	3½-4½
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Serve after 3 minutes standing.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	4-5
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Serve after 3 minutes standing.		
Plated Meal (Chilled)	350 g 450 g	600 W	4½-5 5½-6½
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Serve after 3 minutes standing.		
Cheese Fondue Ready-To-Serve (Chilled)	400 g	600 W	6-7
	Instructions Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Serve after 1-2 minutes standing.		

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 55 2015-01-12 3:47:37

Reheating Baby Food and Milk

Use the power levels and times in this table as guide lines for reheating.

Food	Serving Size	Power	Time
Baby Food (Vegetables + Meat)	190 g	600 W	30 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600 W	20 sec.
	Instructions Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Serve after 2-3 minutes standing.		
Baby Milk	100 ml 200 ml	300 W	30-40 sec. 1 min. to 1 min. 10 sec.
	Instructions Stir or shake well and pour into a sterilized glass bottle. Place into the centre of turntable. Cook uncovered. Before serving, shake well and check the temperature carefully. Serve after 2-3 minutes standing.		

DEFROSTING

Microwaves are an excellent way of defrosting frozen food. Microwaves gently defrost frozen food in a short period of time. This can be of great advantage, if unexpected guests suddenly show up.

Frozen poultry must be thoroughly thawed before cooking. Remove any metal ties and take it out of any wrapping to allow thawed liquid to drain away.

Put the frozen food on a dish without cover. Turn over half way, drain off any liquid and remove any giblets as soon as possible. Check the food occasionally to make sure that it does not feel warm.
If smaller and thinner parts of the frozen food start to warm up, they can be shield by wrapping very small strips of aluminium foil around them during defrosting.

Should poultry start to warm up on the outer surface, stop thawing and allow it to stand for 20 minutes before continuing.

Leave the fish, meat and poultry to stand in order to complete defrosting. The standing time for complete defrosting will vary depending on the quantity defrosted. Please refer to the table below.

Hint: Flat food defrosts better than thick and smaller quantities need less time than bigger ones. Remember this hint while freezing and defrosting food.

For defrosting of frozen food with a temperature of about -18 to -20 °C, use the following table as a guide.

Food	Serving Size	Power	Time (min.)
Meat			
Minced Meat	250 g 500 g	180 W	6-7 8-13
Pork Steaks	250 g	180 W	7-8
	Instructions Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Serve after 15-30 minutes standing.		

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 56 2015-01-12 3:47:37

Food	Serving Size	Power	Time (min.)
Poultry			
Chicken Pieces	500 g (2 pcs)	180 W	14-15
Whole Chicken	1200 g	180 W	32-34
	Instructions First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Serve after 15-60 minutes standing.		
Fish			
Fish Fillets	200 g	180 W	6-7
Whole Fish	400 g	180 W	11-13
	Instructions Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time! Serve after 10-25 minutes standing.		
Fruits			
Berries	300 g	180 W	6-7
	Instructions Spread fruit on a flat, round glass dish (with a large diameter). Serve after 5-10 minutes standing.		
Bread			
Bread Rolls (Each ca. 50 g)	2 pcs 4 pcs	180 W	1-1½ 2½-3
Toast/Sandwich	250 g	180 W	4-4½
	Instructions Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Serve after 5-20 minutes standing.		

GRILL

The grill-heating element is located underneath the ceiling of the cavity. It operates while the door is closed and the turntable is rotating. The turntable's rotation makes the food brown more evenly. Preheating the grill for 3-5 minutes will make the food brown more quickly.

Cookware for grilling:
Should be flameproof and may include metal. Do not use any type of plastic cookware, as it can melt.

Food suitable for grilling:
Chops, sausages, steaks, hamburgers, bacon and gammon rashers, thin fish portions, sandwiches and all kinds of toast with toppings.

Important remark:
Whenever the grill only mode is used, please remember that food must be placed on the high rack, unless another instruction is recommended.

MICROWAVE + GRILL

This cooking mode combines the radiant heat that is coming from the grill with the speed of microwave cooking. It operates only while the door is closed and the turntable is rotating. Due to the rotation of the turntable, the food browns evenly. Three combination modes are available with this model:
600 W + Grill, 450 W + Grill and 300 W + Grill.

Cookware for cooking with microwave + grill
Please use cookware that microwaves can pass through. Cookware should be flameproof. Do not use metal cookware with combination mode. Do not use any type of plastic cookware, as it can melt.

Food suitable for microwave + grill cooking:
Food suitable for combination mode cooking include all kinds of cooked food which need reheating and browning (e.g. baked pasta), as well as foods which require a short cooking time to brown the top of the food. Also, this mode can be used for thick food portions that benefit from a browned and crispy top (e.g. chicken pieces, turning them over half way through cooking). Please refer to the grill table for further details.

Important remark:
Whenever the combination mode (microwave + grill) is used, the food should be placed on the high rack, unless another instruction is recommended. Please refer to the instructions in the following chart.
The food must be turned over, if it is to be browned on both sides.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 57 2015-01-12 3:47:37

Grill Guide for Fresh Food

Preheat the grill with the grill-function for 2-3 minutes.
Use the power levels and times in this table as guide lines for grilling.
Use oven gloves when taking out.

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Toast Slices	4 pcs (each 25 g)	Grill only	3-4	2-3
	Instructions Put toast slices side by side on the high rack.			
Grilled Tomatoes	400 g (2 pcs)	300 W + Grill	5-6	-
	Instructions Cut tomatoes into halves. Put some cheese on top. Arrange in a circle in a flat glass pyrex dish. Place it on the high rack. Stand for 2-3 minutes.			
Tomato-Cheese Toast	4 pcs (300 g)	300 W + Grill	4-5	-
	Instructions Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Toast Hawaii (Ham, Pineapple, Cheese Slices)	4 pcs (500 g)	300 W + Grill	5-6	-
	Instructions Toast the bread slices first. Put the toast with topping on the high rack. Stand for 2-3 minutes.			
Baked Potatoes	500 g	600 W + Grill	7-8	-
	Instructions Cut potatoes into halves. Put them in a circle on the high rack with the cut side to the grill.			
Gratin Potatoes/ Vegetables (Chilled)	450 g	450 W + Grill	9-11	-
	Instructions Put the fresh gratin into a small glass pyrex dish. Put the dish on the high rack. After cooking stand for 2-3 minutes.			
Baked Apples	2 apples (ca. 400 g)	300 W + Grill	7-8	-
	Instructions Core the apples and fill them with raisins and jam. Put some almond slices on top. Put apples on a flat glass pyrex dish. Place the dish directly on the low rack.			
Chicken Pieces	500 g (2 pcs)	300 W + Grill	8-10	6-8
	Instructions Brush chicken pieces with oil and spices. Put them in a circle on the high rack. After grilling stand for 2-3 minutes.			
Roast Chicken	1200 g	450 W + Grill	18-19	17
	Instructions Brush the chicken oil and spices. Put the chicken on the low rack. After grilling stand for 5 minutes.			
Roast Fish	400-500 g	300 W + Grill	5-7	5½-6½
	Instructions Brush skin of whole fish with oil and add herbs and spices. Put two fishes side by side (head to tail) on the high rack. After grilling stand for 2-3 minutes.			

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 58 2015-01-12 3:47:37

CONVECTION

Cooking with convection is the traditional and well known method of cooking food in a traditional oven with hot air.
The heating element and the fan position is at the back-wall, so that the hot air is circulating. This mode is supported by the top heating element.

Cookware for convection cooking:
All conventional ovenproof cookware, baking tins and sheets – anything you would normally use in a traditional convection oven – can be used.

Food suitable for convection cooking:
All biscuits, individual scones, rolls and cakes should be made by this mode as well as rich fruit cakes, choux pastry and soufflés.

MICROWAVE + CONVECTION

This mode combines the microwave energy with the hot air and is therefore reducing the cooking time while giving the food a brown and crispy surface.
Cooking with convection is the traditional and well known method of cooking food in an oven with hot air circulated by a fan on the back-wall.

Cookware for cooking with microwaves + convection:
Should be able to let the microwaves pass through. Should be ovenproof (like glass, pottery or china without metal trims); similar to the cookware described under Microwave + Grill.

Food suitable for Microwave + Convection cooking:
All kinds of meats and poultry as well as casseroles and gratin dishes, sponge cakes and light fruit cakes, pies and crumbles, roast vegetables, scones and breads.

Convection Guide for fresh and frozen food

Preheat the convection with the auto pre-heat function to the desired temperature. Use the power levels and times in this table as guide lines for convection cooking. Use oven gloves when taking out.

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Pizza Frozen Pizza (Ready Baked)	300 g	1 step 300 W + 200 °C 2 step Grill	11-12	2-3
	Instructions Place the pizza on the low rack. After baking stand for 2-3 minutes.			
Pasta Frozen Lasagne	400 g	1 step 450 W + 200 °C 2 step Convt. 200 °C	15-16	5-6
	Instructions Put into a suitable sized glass pyrex dish or leave in the original packaging (take care that this is suitable for microwaves and oven heat). Put frozen pasta gratin on the low rack. After cooking stand for 2-3 minutes.			
Meat Roast Lamb (Medium)	1200-1300 g	600 W + 180 °C	20-23	10-13
	Instructions Brush lamb with oil and spice it with pepper, salt and paprika. Put it on the low rack, first with the fat side down. After cooking wrap in aluminium foil and stand for 10-15 minutes.			
Roast Chicken	1000-1100 g	450 W + 200 °C	20-22	20
	Instructions Brush chicken with oil and spices. Put chicken first breast side down, second side breast side up on the low rack. Stand for 5 minutes.			

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 59 2015-01-12 3:47:37

Fresh Food	Serving Size	Power	1 step (min.)	2 step (min.)
Bread				
Fresh Bread Rolls	6 pcs (350 g)	100 W + 180 °C	8-10	-
	Instructions Put bread rolls in a circle on the low rack. Stand for 2-3 minutes.			
Garlic Bread (Chilled, Prebaked)	200 g (1 pc)	180 W + 200 °C	8-10	-
	Instructions Put the chilled baguette on baking paper on the low rack. After baking stand for 2-3 minutes.			
Cake				
Marble Cake (Fresh Dough)	500 g	Only 180 °C	38-43	-
	Instructions Put the fresh dough in a small rectangular black metal baking dish (length 25 cm). Put the cake on the low rack. After baking stand for 5-10 minutes.			
Small Cakes (Fresh Dough)	10 x 28 g	Only 160 °C	26-28	-
	Instructions Fill the fresh dough evenly in paper cups and set on baking tray on the low rack. After baking stand for 5 minutes.			
Cookies (Fresh Dough)	200-250 g	Only 200 °C	15-20	-
	Instructions Put the chilled croissants on baking paper on the low rack.			
Frozen Cake	1000 g	180 W + 180 °C	18-20	-
	Instructions Put the frozen cake directly on the low rack. After defrost and warming stand for 15-20 minutes.			

TIPS AND TRICKS

MELTING BUTTER

Put 50 g butter into a small deep glass dish. Cover with plastic lid.
Heat for 30-40 seconds using 900 W, until butter is melted.

MELTING CHOCOLATE

Put 100 g chocolate into a small deep glass dish.
Heat for 3-5 minutes, using 450 W until chocolate is melted.
Stir once or twice during melting. Use oven gloves while taking out!

MELTING CRYSTALLIZED HONEY

Put 20 g crystallized honey into a small deep glass dish.
Heat for 20-30 seconds using 300 W, until honey is melted.

MELTING GELATINE

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.
Put drained gelatine into a small glass pyrex bowl.
Heat for 1 minute using 300 W. Stir after melting.

COOKING GLAZE/ICING (FOR CAKE AND GATEAUX)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water. Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 900 W, until glaze/icing is transparent. Stir twice during cooking.

COOKING JAM

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid.
Add 300 g preserving sugar and stir well.
Cook covered for 10-12 minutes using 900 W.
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids.
Stand on lid for 5 minutes.

COOKING PUDDING

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 900 W.
Stir several times well during cooking.

BROWNING ALMOND SLICES

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.
Stir several times during browning for 3½ to 4½ minutes using 600 W.
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 60 2015-01-12 3:47:37

troubleshooting and information code

You may encounter a problem using the oven. In that case, first check the table below and try the suggestions. If a problem persists, or if any information code keeps appearing on the display, contact a local Samsung service centre.

CHECKPOINTS

If you encounter a problem with the oven, first check the table below and try the suggestions.

Problem	Cause	Action
General		
The buttons cannot be pressed properly.	Foreign matter may be caught between the buttons.	Remove the foreign matter and try again.
	For touch models: Moisture is on the exterior.	Wipe the moisture from the exterior.
	Child lock is activated.	Deactivate Child lock.
The time is not displayed.	Power is not supplied.	Make sure power is supplied.
	The Eco (power-saving) function is set.	Turn off the Eco function.
The oven does not work.	Power is not supplied.	Make sure power is supplied.
	The door is open.	Close the door and try again.
	The door open safety mechanisms are covered in foreign matter.	Remove the foreign matter and try again.
The oven stops while in operation.	The user has opened the door to turn food over.	After turning over the food, press the Start button again to start operation.
The power turns off during operation.	The oven has been cooking for an extended period of time.	After cooking for an extended period of time, let the oven cool.
	The cooling fan is not working.	Listen for the sound of the cooling fan.
	Trying to operate the oven without food inside.	Put food in the oven.
	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Several power plugs are being used in the same socket.	Designate only one socket to be used for the oven.
There is no power to the oven.	Power is not supplied.	Make sure power is supplied.
There is a popping sound during operation, and the oven doesn't work.	Cooking sealed food or using a container with a lid may causes popping sounds.	Do not use sealed containers as they may burst during cooking due to expansion of the contents.
The oven exterior is too hot during operation.	There is not sufficient ventilation space for the oven. There are intake/exhaust outlets on the front and rear of the oven for ventilation.	Keep the gaps specified in the product installation guide.
	Objects are on top of the oven.	Remove all objects on the top of the oven.
The door cannot be opened properly.	Food residue is stuck between the door and oven interior.	Clean the oven and then open the door.

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 61 2015-01-12 3:47:37

Problem	Cause	Action
The oven does not heat.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
Heating is weak or slow.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The warm function does not work.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The thaw function does not work.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.

Problem	Cause	Action
The interior light is dim or does not turn on.	The door has been left open for a long time.	The interior light may automatically turn off when the Eco function operates. Close and reopen the door or press the "Cancel" button.
	The interior light is covered by foreign matter.	Clean the inside of the oven and check again.
A beeping sound occurs during cooking.	If the Auto Cook function is being used, this beeping sound means it's time to turn over the food during thawing.	After turning over the food, press the Start button again to restart operation.
The oven is not level.	The oven is installed on an uneven surface.	Make sure the oven is installed on flat, stable surface.
There are sparks during cooking.	Metal containers are used during the oven/thawing functions.	Do not use metal containers.
When power is connected, the oven immediately starts to work.	The door is not properly closed.	Close the door and check again.
There is electricity coming from the oven.	The power or power socket is not properly grounded.	Make sure the power and power socket are properly grounded.
There is water dripping.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.
Steam leaks from the door.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.
There is water left in the oven.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 62 2015-01-12 3:47:37

Problem	Cause	Action
The brightness inside the oven varies.	Brightness changes depending on power output changes according to function.	Power output changes during cooking are not malfunctions. This is not an oven malfunction.
Cooking is finished, but the cooling fan is still running.	To ventilate the oven, the cooling fan continues to run for about 5 minutes after cooking is complete.	This is not an oven malfunction.
Pressing the +30sec button operates the oven.	This happens when the oven was not operating.	The microwave oven is designed to operate by pressing the +30 sec button when it was not operating.
Turntable		
While turning, the turntable comes out of place or stops turning.	There is no roller ring, or the roller ring is not properly in place.	Install the roller ring and then try again.
The turn table drags while turning.	The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave.	Adjust the amount of food and do not use containers that are too large.
The turn table rattles while turning and is noisy.	Food residue is stuck to the bottom of the oven.	Remove any food residue stuck to the bottom of the oven.

Problem	Cause	Action
Grill		
Smoke comes out during operation.	During initial operation, smoke may come from the heating elements when you first use the oven.	This is not a malfunction, and if you run the oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the oven cool and then remove the food from the heating elements.
	Food is too close to the grill.	Put the food a suitable distance away while cooking.
	Food is not properly prepared and/or arranged.	Make sure food is properly prepared and arranged.
Oven		
The oven does not heat.	The door is open.	Close the door and try again.
Smoke comes out during preheating.	During initial operation, smoke may come from the heating elements when you first use the oven.	This is not a malfunction, and if you run the oven 2-3 times, it should stop.
	Food is on the heating elements.	Let the oven cool and then remove the food from the heating elements.
There is a burning or plastic smell when using the oven.	Plastic or non heat-resistant cookware is used.	Use glass cookware suitable for high temperatures.
There is a bad smell coming from inside the oven.	Food residue or plastic has melted and stuck to the interior.	Use the steam function and then wipe with a dry cloth. You can put a lemon slice inside and run the oven to remove the odour more quickly.

(continued)

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 63 2015-01-12 3:47:37

Problem	Cause	Action
The oven does not cook properly.	The oven door is frequently opened during cooking.	Do not frequently open the door unless you are cooking things that need to be turned. If you open the door often, the interior temperature will be lowered and this may affect the results of your cooking.
	The oven controls are not correctly set.	Correctly set the oven controls and try again.
	The grill or other accessories are not correctly inserted.	Correctly insert the accessories.
	The wrong type or size of cookware is used.	Reset the oven controls or use suitable cookware with flat bottoms.

INFORMATION CODES

If the oven fails to operate, you may see an information code on the display. Check the table below and try the suggestions.

Code	Description	Action
C-20	The temperature sensor is open.	Unplug the power cord of the oven, and contact a local Samsung service centre.
	The temperature sensor is short.	
C-21	This code appears when the oven temperature high. In case the temperature rises over the limit temperature during operation of each mode. (Fire sensed.)	Unplug the power cord for cooling enough time, and restart the microwave oven.
C-d0	The touch key is malfunction.	Unplug the power cord for cooling enough time, and clean the button. (Dust, Water) When appear same problem, contact a local Samsung service centre.

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MC28H5025**
Power source	230 V ~ 50 Hz AC
Power consumption	
Maximum power	2900 W
Microwave	1400 W
Grill (heating element)	1500 W
Convection (heating element)	Max. 2100 W
Output power	100 W / 900 W - 6 levels (IEC-705)
Operating frequency	2450 MHz
Dimensions (W x H x D)	
Outside	517 x 310 x 474.8 mm
Oven cavity	358 x 235.5 x 327 mm
Volume	28 liter
Weight	
Net	17.5 kg approx.

MC28H5025_TL_DE68-04351A-00_EN_150112.indd 64 2015-01-12 3:47:37

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
BANGLADESH	9612300300	
INDONESIA	021-56997777 08001128888	www.samsung.com/id/support
JAPAN	0120-363-905	www.samsung.com/jp/support
MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-329999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
MACAU	0800 333	www.samsung.com/support
MYANMAR	01-2399888	
SRI LANKA	0094117540540 0094115900000	

This product is RoHS compliant

DE68-04351A-00